



- Turn the "LIGHTS" (Dimmer) switch to "OFF", "LO" and "HI".
- Check the "LIGHTS" (Dimmer) switch for continuity.

A				
Switch position	Good condition	Bad condition		
OFF	X	○	X	○
HI	○	X	X	○
B				
Switch position	Good condition	Bad condition		
OFF	X	○	X	○
LO	○	X	X	○
○ : Continuity X : Nocontinuity				

BAD CONDITION

"LIGHTS" (Dimmer) switch is faulty, replace it.





GOOD CONDITION

4. Lighting voltage

- Connect the Pocket Tester (AC20V) to the wireharness. (Yellow and Black) as shown.

Tester (+) Lead → Yellow ② Lead
Tester (−) Lead → Black ① Lead

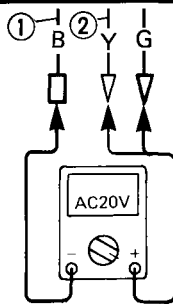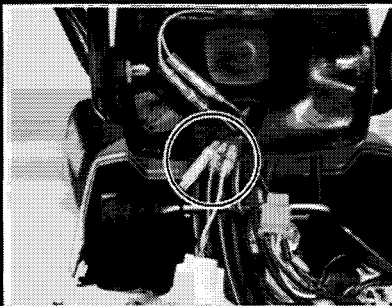

- Turn the "LIGHTS" (Dimmer) switch to the "HI" position.
- Connect the Inductive Tachometer to the spark plug lead.
- Start the engine and accelerate to about 5,000 r/min.

⚠ CAUTION:

Do not run the engine in neutral above 6,000 r/min for more than 1 or 2 seconds.

- Check the lighting voltage for specification.

MEETS SPECIFICATION



Lighting Voltage:
13.5 ~ 14.1V at 5,000 r/min

Lighting system is good condition.



OUT OF SPECIFICATION