



TAILLIGHT DOES NOT COME ON.

Procedure

Check;

- | | |
|-------------------------------------|---|
| 1. Taillight bulb conduct | 4. Lighting voltage |
| 2. Taillight bulb socket conduct | 5. Lighting coil resistance |
| 3. "LIGHTS" (Dimmer) switch conduct | 6. Wiring connection (Entire lighting system) |

NOTE:

- Remove the following parts before troubleshooting.
 - 1) Fuel tank cover (Front)
- Use the following special tools in the troubleshooting.



Pocket Tester:
P/N. YU-03112
P/N. 90890-03112




Inductive Tachometer:
P/N. YU-03113
P/N. 90890-03113

1. Taillight bulb conduct

- Remove the taillight lens and bulb.
- Connect the Pocket Tester ($\Omega \times 1$) to the bulb terminals.

Tester (+) Lead → Terminal ①
Tester (–) Lead → Terminal ②

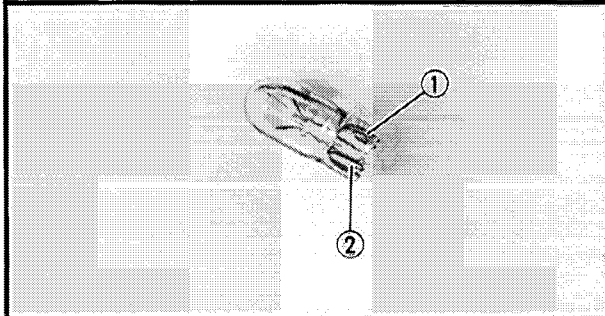

- Check the bulb for continuity.

NOCONTINUITY

Bulb is faulty, replace it.

CONTINUITY

2. Taillight bulb socket conduct

- Install the bulb to the taillight socket.
- Disconnect the taillight leads (Blue and Black).
- Connect the Pocket Tester ($\Omega \times 1$) to the taillight leads (Blue and Black).