



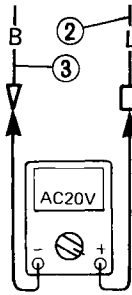

4. Lighting voltage

- Connect the Pocket Tester (AC20V) to the wireharness ① (Blue and Black) as shown.

Tester (+) Lead → Blue ② Lead
Tester (–) Lead → Black ③ Lead

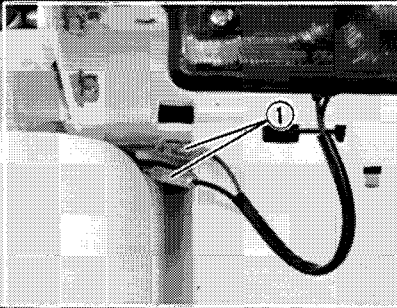

- Turn the "LIGHTS" (Dimmer) switch to "LO" or "HI" position.
- Connect the Inductive Tachometer to the spark plug lead.
- Start the engine and accelerate to about 5,000 r/min.

⚠ CAUTION:

Do not run the engine in neutral above 6,000 r/min for more than for 2 seconds.

- Check the lighting voltage for specification.



Lighting Voltage:
13.5 ~ 14.1V at 5,000 r/min

MEETS SPECIFICATION

Lighting system is good condition.

OUT OF SPECIFICATION

