
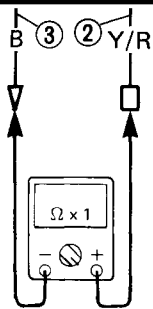


**5. Lighting coil resistance**

- Disconnect the CDI magneto leads ① (Yellow/Red and Black).
- Connect the Pocket Tester ($\Omega \times 1$) to the lighting coil leads.

Tester (+) Lead → Yellow/Red ② Lead

Tester (–) Lead → Black ③ Lead

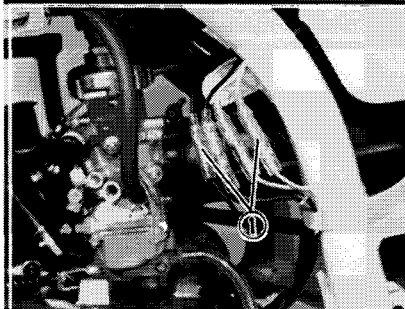

- Check the lighting coil for specified resistance.



Lighting Coil Resistance:
0.16 ~ 0.24 Ω at 20°C (68°F)

OUT OF SPECIFICATION

Lighting coil is faulty, replace it.



MEETS SPECIFICATION

6. Wiring connection (Entire lighting system)

- Check entire lighting system for connections. Refer to "WIRING DIAGRAM" section.



CORRECT

Voltage regulator is faulty, replace it.

7