



TROUBLESHOOTING

"OIL" INDICATOR LIGHT DOES NOT COME ON.

Procedure

Check;

1. "OIL" indicator light bulb conduct
2. "OIL" indicator light bulb socket conduct
3. Lighting voltage
4. Oil level gauge
5. Wiring connection (Entire signal system)

NOTE:

- Fill the engine oil to oil tank before troubleshooting.
- Remove the following parts before troubleshooting.
 - 1) Headlight cover
- Use the following special tools in this troubleshooting.



Pocket Tester:

P/N. YU-03112

P/N. 90890-03112



Inductive Tachometer:

P/N. YU-03113


P/N. 90890-03113

1. "OIL" indicator light bulb conduct

- Remove the "OIL" indicator light bulb.
- Connect the Pocket Tester ($\Omega \times 1$) to the bulb terminals.

Tester (+) Lead → Terminal ①

Tester (−) Lead → Terminal ②

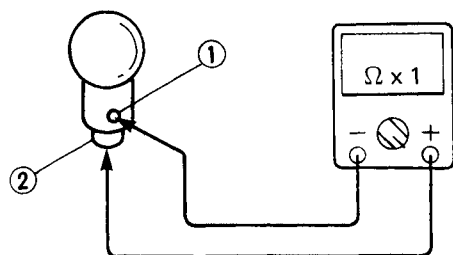

- Check the "OIL" indicator light bulb for continuity.

NOCONTINUITY

"OIL" indicator light bulb is faulty, replace it.

CONTINUITY

