





2. "OIL" indicator light bulb socket conduct

- Install the bulb to the "OIL" indicator light socket.
- Disconnect the "OIL" indicator light leads ① (Brown and Green).
- Connect the Pocket Tester ($\Omega \times 1$) to the "OIL" indicator light leads.

Tester (+) Lead → Brown ② Lead

Tester (−) Lead → Green ③ Lead

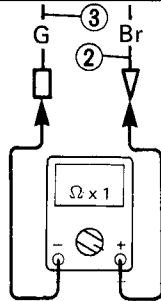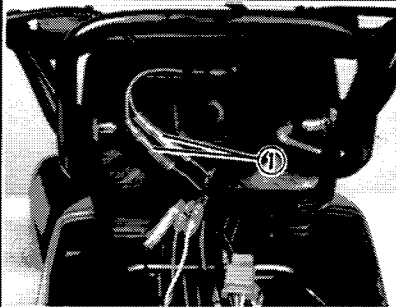

NOCONTINUITY

"OIL" indicator light bulb socket is faulty, replace it.

- Check the bulb socket for continuity.





CONTINUITY

3. Lighting voltage

- Connect the Pocket Tester (AC20V) to wireharness ①.

Tester (+) Lead → Brown ② Lead

Tester (−) Lead → Ground

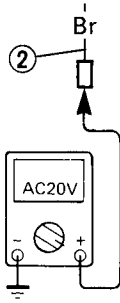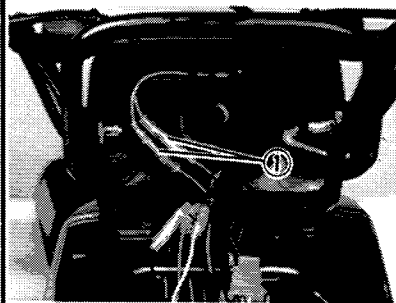

- Connect the Inductive Tachometer to the spark plug lead.
- Start the engine and accelerate to about 5,000 r/min.