

**⚠ CAUTION:**

Do not run the engine in neutral above 6,000 r/min for more than 1 or 2 seconds.

- Check the lighting voltage for specification.



Lighting Voltage:
13.5 ~ 14.1V at 5,000 r/min



OUT OF SPECIFICATION

Lighting system is faulty, check the lighting coil resistance and the wiring connection (Entire lighting system).
Refer to the "LIGHTING SYSTEM" section.

MEETS SPECIFICATION

4. Oil level gauge

- Disconnect the oil level gauge leads ① (Green and Black).
- Connect the jumper lead ② to the oil level gauge leads.

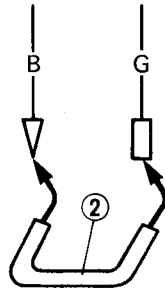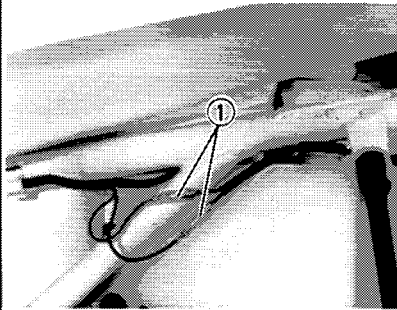

- Start the engine.

"OIL" INDICATOR LIGHT COMES ON.

Oil level gauge is faulty, replace it.

"OIL" INDICATOR LIGHT
DOES NOT COME ON.

5. Wiring connection (Entire signal system)

- Check entire signal system for connections.
Refer to "WIRING DIAGRAM" section.