



TROUBLESHOOTING

IF IGNITION SYSTEM SHOULD BECOME INOPERATIVE (NO SPARK OR INTERMITTENT SPARK).

Procedure (1)

Check;

1. Ignition system
2. Spark plug
3. Ignition spark gap
4. Spark plug cap resistance
5. Main switch conduct
6. "ENGINE STOP" switch conduct
7. Ignition coil resistance
8. Source coil resistance
9. Pickup coil resistance
10. Wiring connection (Entire ignition system)

NOTE:

Remove the following parts before troubleshooting.

- 1) Fuel tank cover (Front)
- 2) Seat
- 3) Fuel tank cover (Rear)
- 4) Fuel tank

Use the following special tools in this troubleshooting.




Dynamic Spark Tester:
P/N. YM-34487
P/N. 90890-03144



Pocket Tester:
P/N. YU-03112
P/N. 90890-03112

1. Ignition system

- Disconnect the control unit coupler ① (Black/White, Yellow/Black and Black) from the wireharness.
- Start the engine.

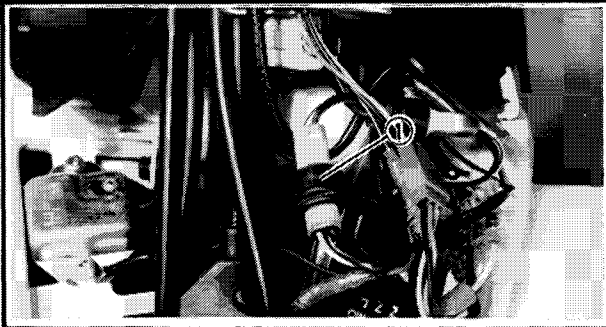

ENGINE STARTS.

Go to "Procedure (2)".

ENGINE DOES NOT START.

*