



2. Spark plug

- Check the spark plug condition, type and gap. Refer to "CHAPTER 3. SPARK PLUG INSPECTION" section.

Standard Spark Plug:
 For USA and Oceania:
 B8ES (NGK), W24ES (N.D.)
 For Canada and S. Africa:
 BP8ES (NGK)

 **Spark Plug Gap:**
 0.7 ~ 0.8 mm (0.028 ~ 0.032 in)

INCORRECT



Repair or replace spark plug.




CORRECT

3. Ignition spark gap

- Disconnect the spark plug cap from spark plug.
- Connect the Dynamic Spark Tester ① as shown.

② Spark plug cap
 ③ Spark plug

- Turn the main switch to "ON".
- Kick the kick crank.

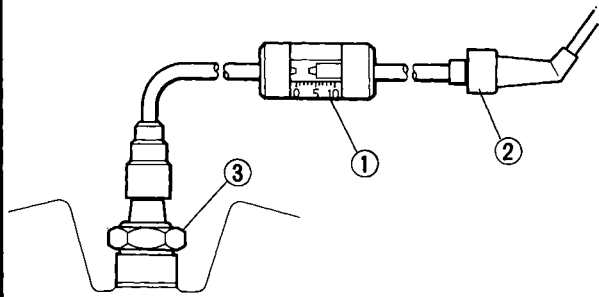

- Check the ignition spark gap.
- Start engine, and increase spark gap until misfire occurs.

 **Minimum Spark Gap:**
 6.0 mm (0.24 in)

MEETS SPECIFICATION



Ignition system is good.



OUT OF SPECIFICATION
OR NO SPARK