




4. Spark plug cap resistance

- Remove the spark plug cap.
- Connect the Pocket Tester ($\Omega \times 1k$) to the spark plug cap.

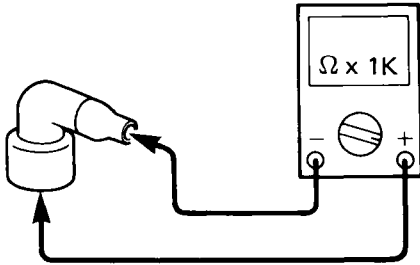

- Check the spark plug cap for specified resistance.



Spark Plug Cap Resistance:
4 ~ 6k Ω at 20°C (68°F)

OUT OF SPECIFICATION

Spark plug cap is faulty, replace it.





MEETS
SPECIFICATION

5. Main switch conduct

- Disconnect the main switch leads ①.
- Connect the Pocket Tester ($\Omega \times 1$) to the main switch leads.

Tester (+) Lead → Black/White ② Lead
Tester (–) Lead → Black ③ Lead

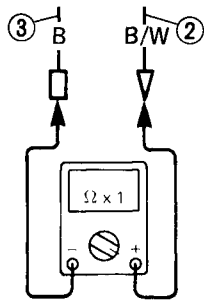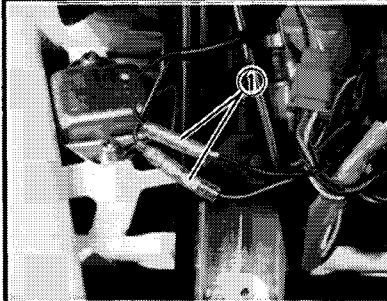

- Turn the main switch to "ON" and "OFF".
- Check the main switch for continuity.

BAD CONDITION

Main switch is faulty, replace it.

Switch position	Good condition	Bad condition		
OFF	○	X	X	○
ON	X	○	X	○

○ : Continuity X : Nocontinuity



GOOD CONDITION

*