



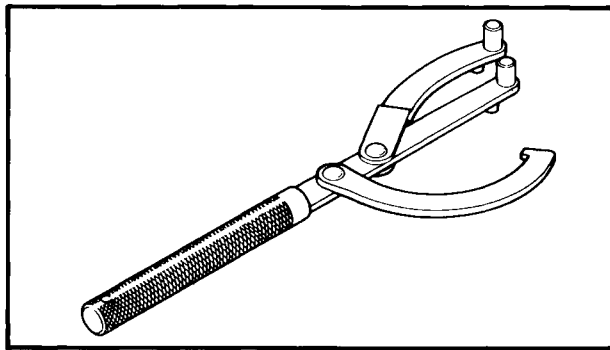


3. Rotor Holder
P/N YU-01235
P/N 90890-01235

This tool is used to hold the CDI rotor when removing or installing the primary drive gear, balancer gear and CDI rotor securing nut.

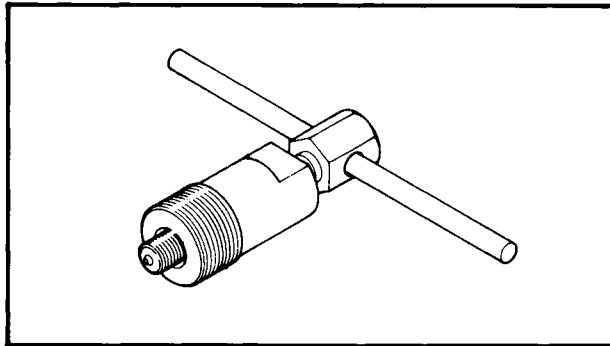


4. Rotor Puller
P/N YM-01189
P/N 90890-01189

This tool is used to remove the CDI rotor.

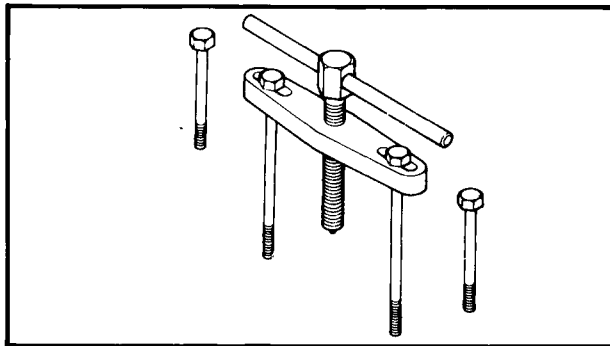


5. Crankcase Separating Tool
P/N YU-01135
P/N 90890-01135

This tool is used to separate the crankcase and remove the crankshaft.

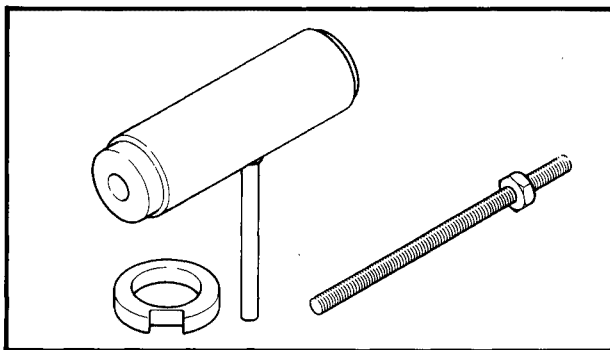

6. Crankshaft Installing Tool
P/N YU-90050
P/N 90890-01274
P/N 90890-01275

These tools are used to install the crankshaft.

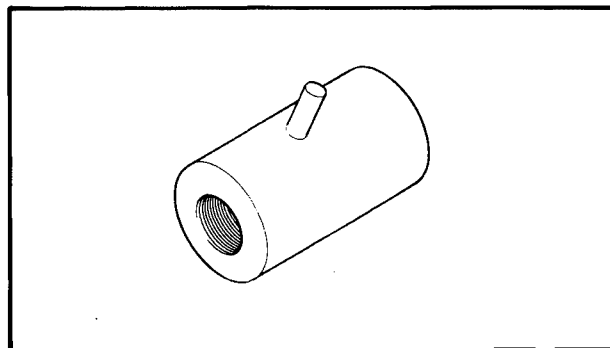

7. Adapter #12
P/N YM-90063
P/N 90890-01278

This tool is used to install the crankshaft.