


GENERAL INFORMATION

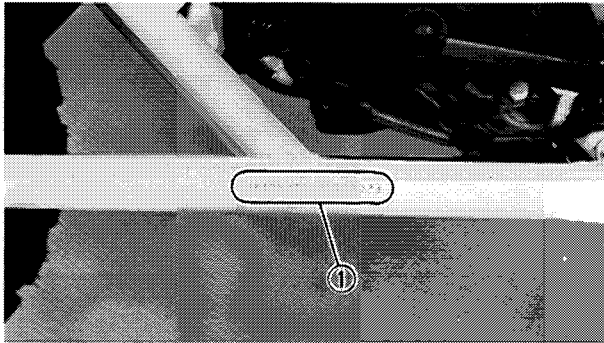

MACHINE IDENTIFICATION


VEHICLE IDENTIFICATION NUMBER (FOR USA AND CANADA)

The vehicle identification number ① is stamped into the left side of the frame.

NOTE: _____

The vehicle identification number is used to identify your machine and may be used to register your machine with the licensing authority in your state.

Starting Serial Number:
JY42XJW0 * JC000101

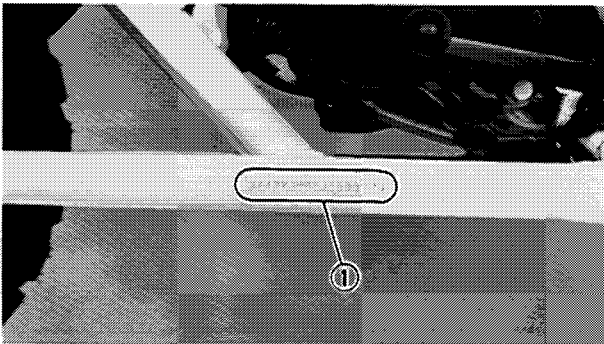


FRAME SERIAL NUMBER (EXCEPT FOR USA AND CANADA)

The frame serial number ① is stamped into the left side of frame.

NOTE: _____

The first three digits of these numbers are for model identifications; the remaining digits are the unit production number.

Starting Serial Number:
2XJ-000101

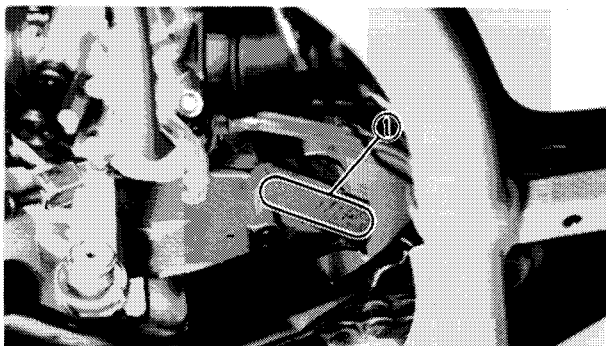

ENGINE SERIAL NUMBER

The engine serial number ① is stamped into the right side of the engine.

NOTE: _____

The first three digits of these numbers are for model identifications; the remaining digits are the unit production number.

Starting Serial Number:
2XJ-000101

NOTE: _____

Designs and specifications are subject to change without notice.

1