





18. Perform an autolube pump air bleeding.
Refer to the "AUTOLUBE PUMP AIR BLEEDING" section.

19. Install:

- Autolube pump cover ①

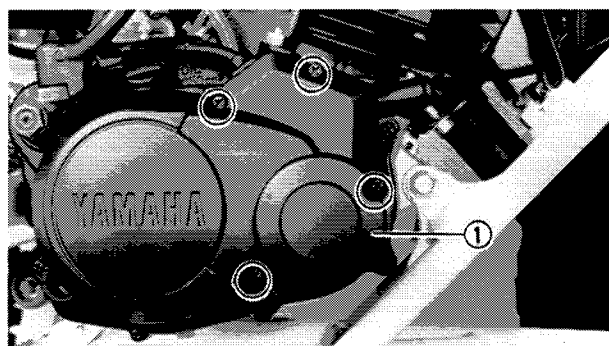

Screw (Autolube Pump Cover):
7 Nm (0.7 m·kg, 5.1 ft·lb)

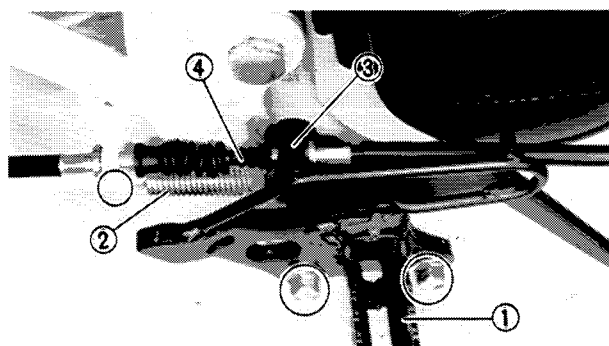

20. Install:

- Footrest ① (Right)
(with rear brake pedal)




Bolt (Footrest):
55 Nm (5.5 m·kg, 40 ft·lb)

21. Connect:

- Spring ②

22. Install:

- Pin ③ (Parking brake cable)
- Cover ④ (Brake cable stopper)

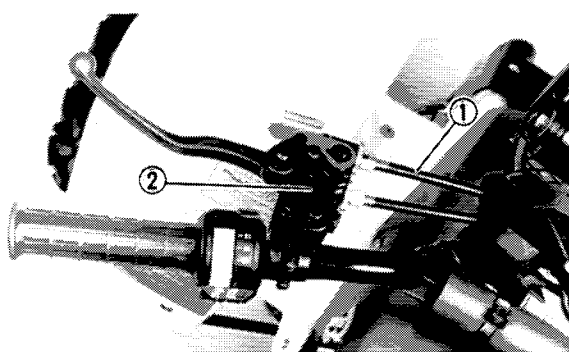

23. Connect:

- Parking brake cable ①
(to parking brake cable holder ②)

24. Set the adjuster cover.

25. Fill:

- Crankcase
Refer to the "TRANSMISSION OIL REPLACEMENT" section.

26. Adjust:

- Clutch cable free play
Refer to the "Clutch Cable Free Play Adjustment" section.

27. Adjust:

- Parking brake
Refer to the "PARKING BRAKE ADJUSTMENT" section.