


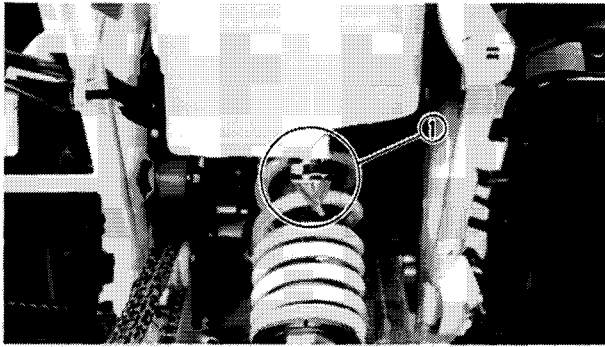


AIR FILTER CLEANING

NOTE:


There is a check hose (1) at the bottom of the air filter case. If dust and/or water collects in this hose, clean the air filter element and air filter case.

3

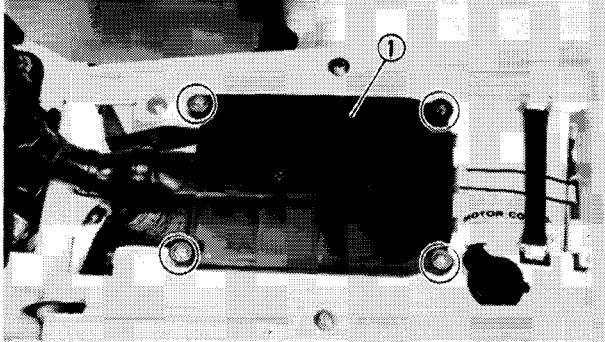

1. Remove:

- Seat
- Cover (1) (Filter case)

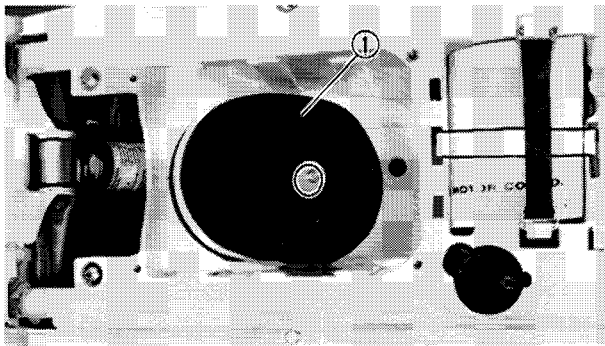


2. Remove:

- Air filter assembly (1)

CAUTION:

Never operate the engine with the air filter element removed. This will allow unfiltered air to enter, causing rapid wear and possible engine damage. Additionally, operation without the filter element will affect carburetor tuning with subsequent poor performance and possible engine overheating.

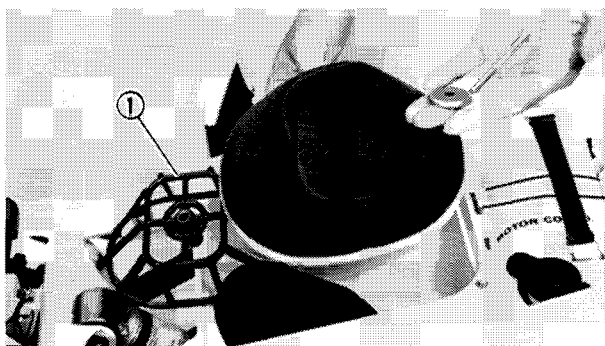

3. Remove:

- Element holder (1)
(from air filter element)