



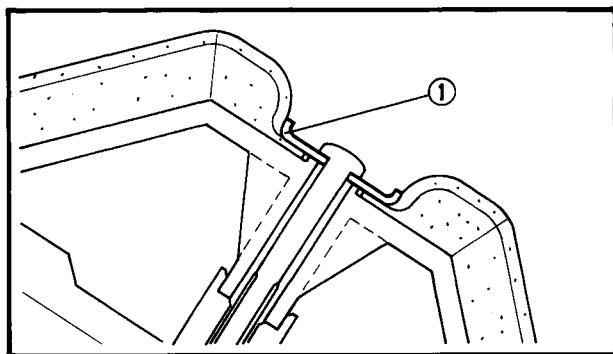

4. Inspect:
 - Air filter element
Damage → Replace.
5. Clean:
 - Air filter element

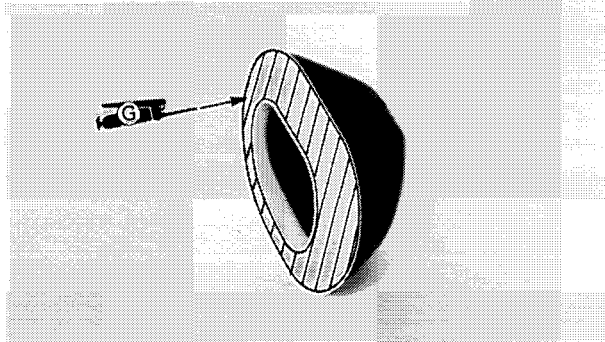

Cleaning steps:

- Wash the element with solvent.
- Remove the remaining solvent by squeezing the element.
- Apply the SAE 10W30 motor oil to the entire surface of the element.
- Wrap the element with a clean rag, and squeeze out the excess oil.

NOTE:

The element should be wet but not dripping.

- Apply the All-purpose grease to the element seat.

⚠ CAUTION:

Do not twist the filter element when squeezing the filter element.

⚠ WARNING:

Never use low flash point solvents such as gasoline to clean the air filter element. Such solvent may lead to a fire or explosion.

6. Clean the inside of the air filter case and the case cover, using a cloth dampened with solvent.

7. Install:
 - Air filter assembly

NOTE:

Install the washer ① with its bent fringe upward as shown.

8. Install:
 - Cover (Filter case)
 - Seat

⚠ CAUTION:

After installing the air filter element, make sure it is positioned correctly in place.