



CRANKCASE VENTILATION HOSE INSPECTION


INSP
ADJ

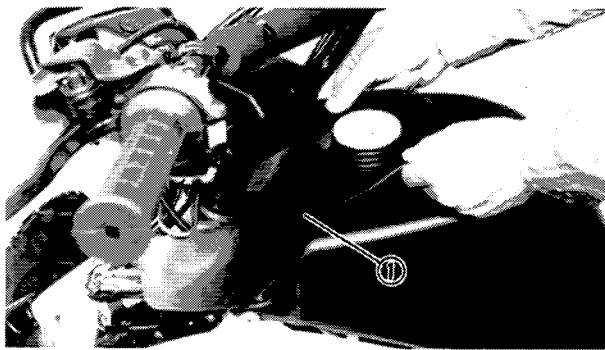

4. Remove:
 - Fuel tank cover ① (Inner)
5. Install:
 - Fuel tank cap

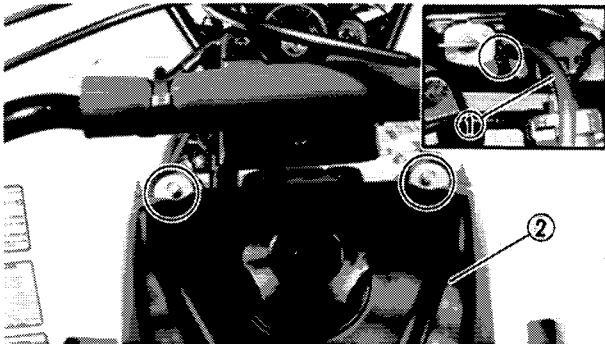

6. Disconnect:
 - Fuel hose ①
7. Remove:
 - Fuel tank ②

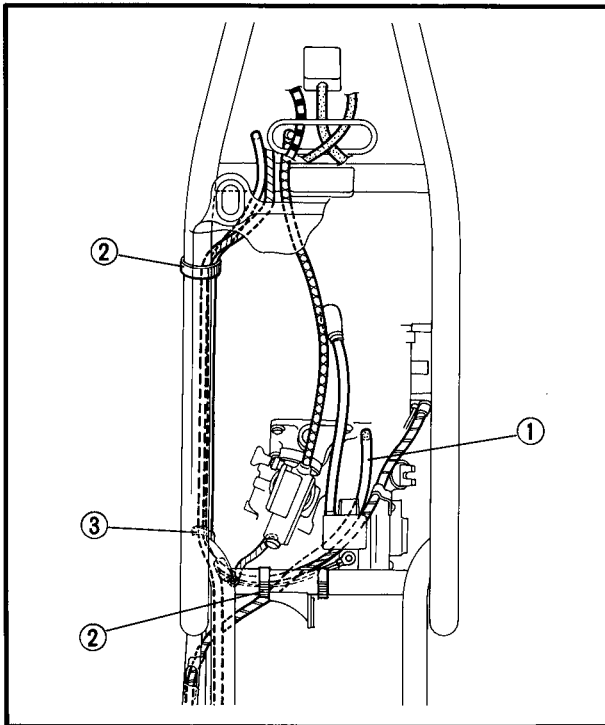

8. Inspect:
 - Crankcase ventilation hose ①Cracks/Damage → Replace.

⚠ CAUTION:

Make sure the crankcase ventilation hose is routed correctly.

- ② Band
- ③ Clamp
- ④ Carburetor switch

9. Install:
 - Fuel tank
 - Fuel tank cover (Inner)
 - Fuel tank cover
 - Fuel tank cap
 - Front cover
 - Seat



Bolt (Fuel Tank):
6 Nm (0.6 m·kg, 4.3 ft·lb)

3