



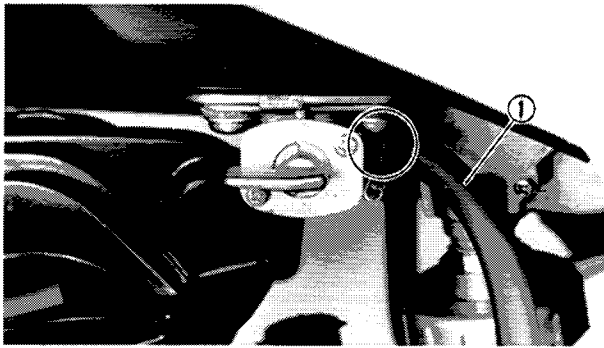

10. Connect:

- Fuel hose ①

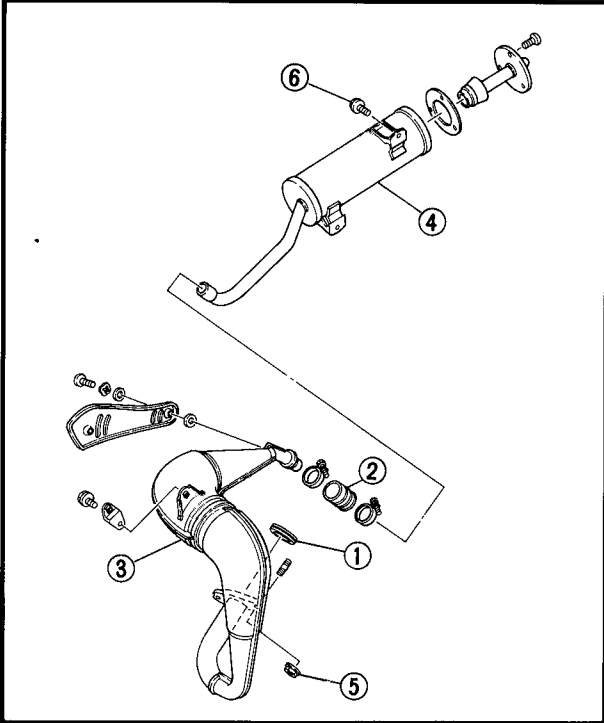

EXHAUST SYSTEM INSPECTION

1. Inspect:


- Gasket (Exhaust pipe) ①
- Joint (Silencer) ②
Damage → Replace.
Exhaust gas leakage → Repair.
- Exhaust pipe ③
- Silencer ④
Cracked/Dent/Damage → Repair or replace.

2. Tighten:

- Exhaust pipe
- Silencer



Nut ⑤ (Exhaust pipe):
21 Nm (2.1 m·kg, 15 ft·lb)
Bolt ⑥ (Silencer):
23 Nm (2.3 m·kg, 17 ft·lb)

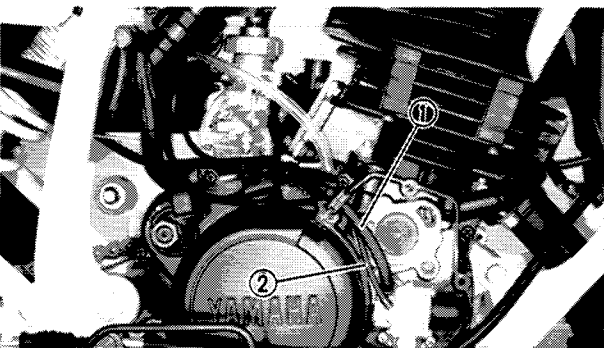

ENGINE OIL LINE INSPECTION

1. Remove:

- Autolube pump cover


2. Inspect:

- Oil hose ①
- Oil delivery hose ②
Cracks/Damage → Replace.
Loose connection → Connect properly.

③ Engine oil tank

3. Install:

- Autolube pump cover

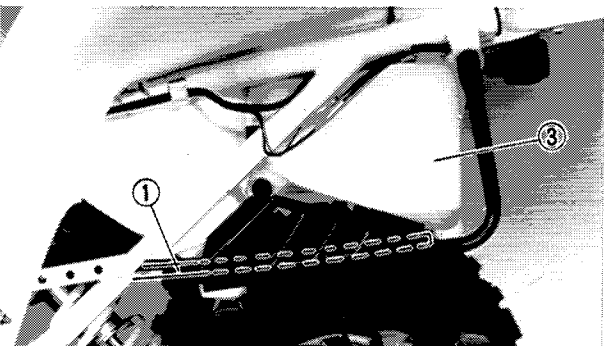

Screw (Autolube Pump Cover)
7 Nm (0.7 m·kg, 5.1 ft·lb)