




CHASSIS

FRONT BRAKE ADJUSTMENT

⚠ CAUTION:

Proper lever free play is essential to avoid excessive brake drag.

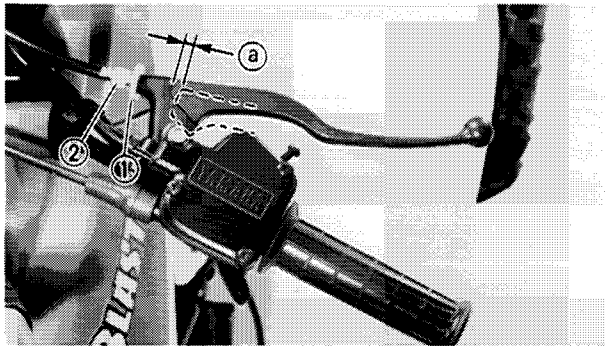


1. Check:

- Front brake cable free play ①
Out of specification → Adjust.



Front Brake Cable Free Play:
5 ~ 8 mm (0.20 ~ 0.31 in)

3

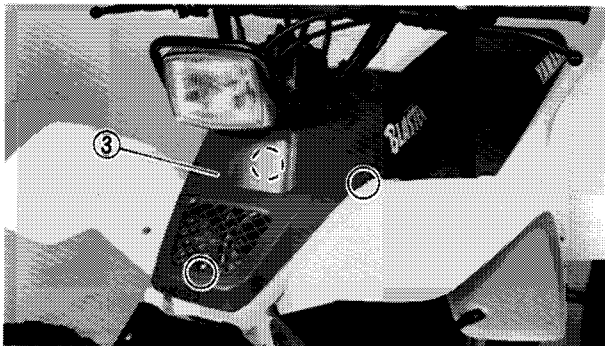


2. Adjust:

- Front brake cable free play

Adjustment steps:

- Loosen the locknut ① and turn the adjuster ② clockwise to release the tension in the front brake cable.
- Remove the front cover ③.
- Visually check the cable joint ④ in the equalizer ⑤ to verify it is horizontal.
- If not horizontal, turn both adjuster ⑥ (Front hub — left and right) until the cable joint ④ is horizontal.
- Turn the adjuster ② clockwise or counterclockwise until proper free play is attained.

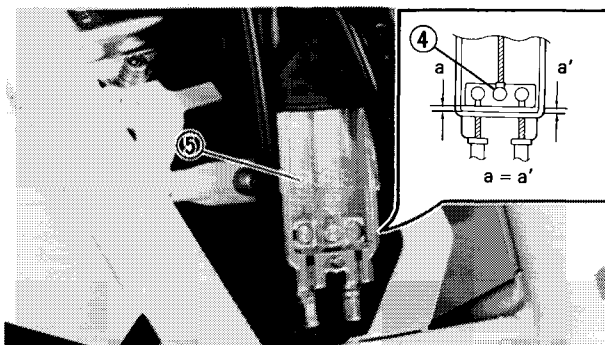

Clockwise

Free play is increased.

Counterclockwise

Free play is decreased.

- Tighten the locknut ①.

