


PARKING BRAKE ADJUSTMENT/BRAKE PAD INSPECTION (REAR BRAKE)/BRAKE SHOE INSPECTION (FRONT BRAKE)



PARKING BRAKE ADJUSTMENT

1. Pull back the adjuster cover.
2. Check:
 - Parking brake cable free play (a)
 Out of specification → Adjust.

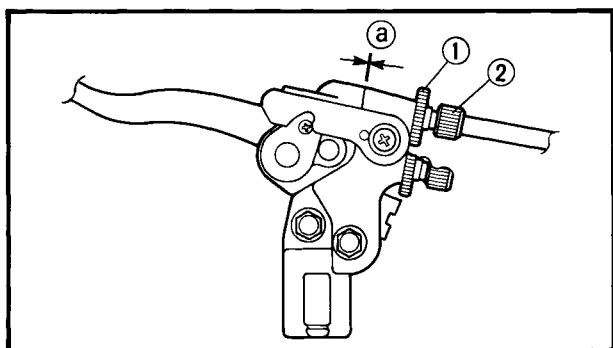

Parking Brake Cable Free Play:
0 mm (0 in)

3. Adjust:
 - Parking brake cable free play

Adjustment steps:


- Loosen the locknut (1).
- Turn the adjuster (2) counterclockwise until the parking brake cable free play (a) becomes 0, or as close to 0 as possible.
- Tighten the locknut (1).

4. Set the adjuster cover.

⚠ WARNING:


After this adjustment is performed, block the rear of the machine off the ground, and spin the rear wheels to ensure there is no brake drag. If any brake drag is noticed, perform the above steps again.

3

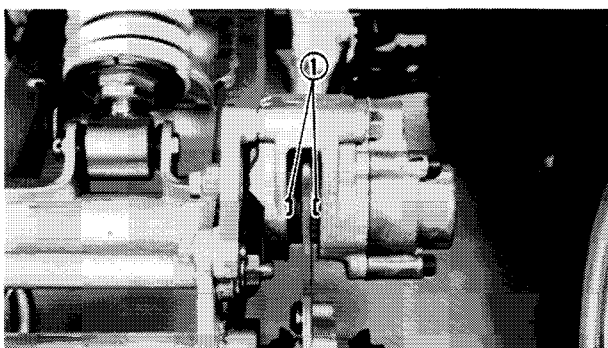

BRAKE PAD INSPECTION (REAR BRAKE)

1. Depress the brake pedal.
2. Inspect:
 - Brake pad
 Wear indicator (1) almost contacts brake disc → Replace brake pad as a set.
Refer to the "REAR BRAKE" section in the CHAPTER 6 for replacement.

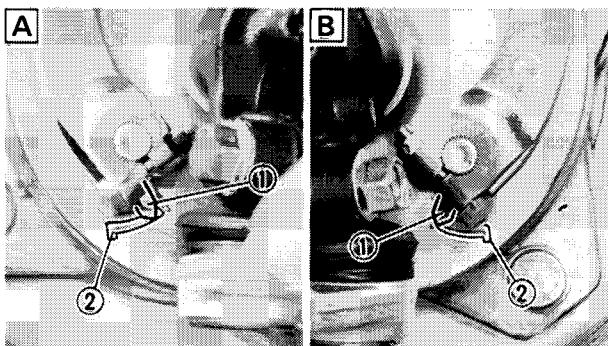

BRAKE SHOE INSPECTION (FRONT BRAKE)

1. Apply the front brake.
2. Inspect:
 - Wear indicator (1)
 Indicator reaches the wear limit line (2) → Replace brake shoes as a set.
Refer to the "FRONT WHEEL AND FRONT BRAKE" section in the CHAPTER 6 for replacement.

A Right side

B Left side