




DRIVE CHAIN SLACK ADJUSTMENT

NOTE:

Before checking and/or adjusting, rotate the rear wheels through several revolutions and check slack at several points to find the tightest point. Check and/or adjust the chain slack with the rear wheels in this "tightest" position.

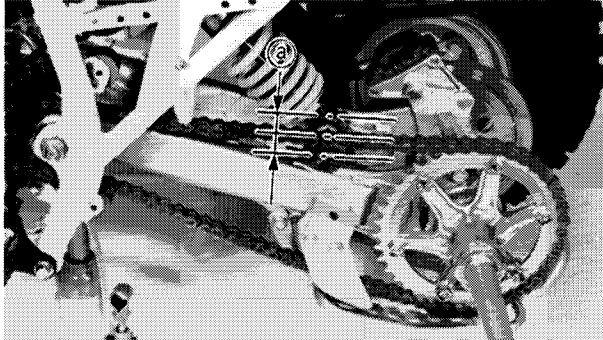


1. Elevate the rear wheels by placing a suitable stand under the rear of frame.
2. Measure:
 - Drive chain slack **a**
 - At the position shown in the photograph.
 - Out of specification → Adjust.



Drive Chain Slack:
30 ~ 40 mm (1.18 ~ 1.57 in)

3

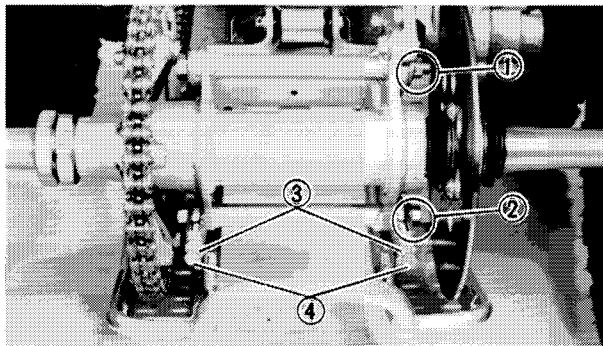

3. Adjust:

- Drive chain slack

Adjustment steps:

⚠ CAUTION:

Too small chain slack will overload the engine and other vital parts; keep the slack within the specified limits.

- Loosen the rear axle hub upper nut **①**.
- Loosen the rear axle hub lower nut **②**.
- Loosen the adjuster locknut **③**.
- Adjuster chain slack by turning the adjuster **④**.

Clockwise	Slack is decreased.
Counterclockwise (while pushing the rear axle hub to the forward)	Slack is increased.

NOTE:

Turn each adjuster exactly the same amount to maintain correct axle alignment. (There are marks on each side of swingarm and on each chain puller; use them to check for proper alignment.)

- Tighten the rear axle hub nuts and adjuster locknuts.