
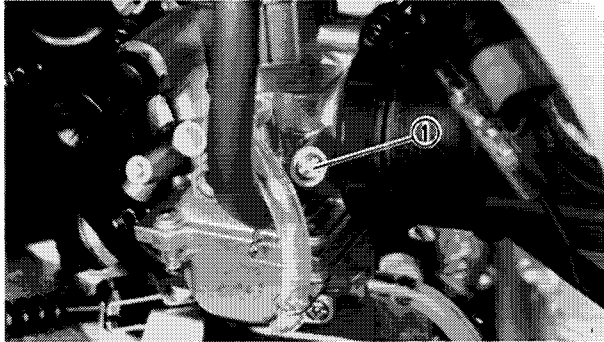


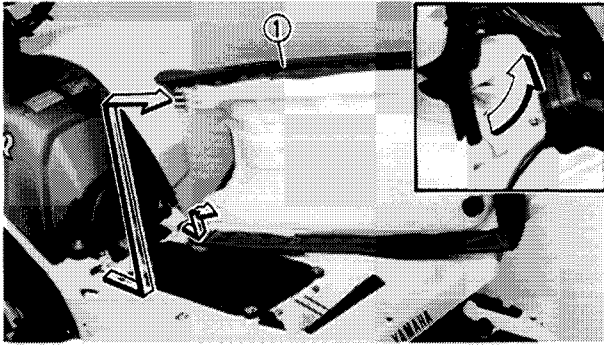

ENGINE

IDLE SPEED ADJUSTMENT

1. Remove:
 - Seat ①
2. Warm up engine for a few minutes.
3. Adjust:
 - Engine Idle speed

Adjustment steps:

- Turn the pilot air screw ① clockwise until it is lightly seated.
- Loosen the pilot air screw by turning it counterclockwise for the specified number of turns.

Pilot Air Screw:

1-1/2 counterclockwise turns

- Turn the throttle stop screw ② until the Idle speed is in the specified range. Use the Inductive Tachometer.

Clockwise

Idle speed becomes higher.

Counterclockwise

Idle speed becomes lower.

**Inductive Tachometer:**

P/N. YU-03082

P/N. 90890-03113

**Engine Idle Speed:**

1,450 ~ 1,550 r/min

- Turn the pilot air screw ① clockwise or counterclockwise in 1/8-turn increments to achieve the highest speed with just the pilot air screw.
- Once again, turn the throttle stop screw ② to attain the specified Idle speed.

4. Install:

- Seat

5. Check:

- Throttle cable free play

Refer to "THROTTLE CABLE FREE PLAY ADJUSTMENT" section.