


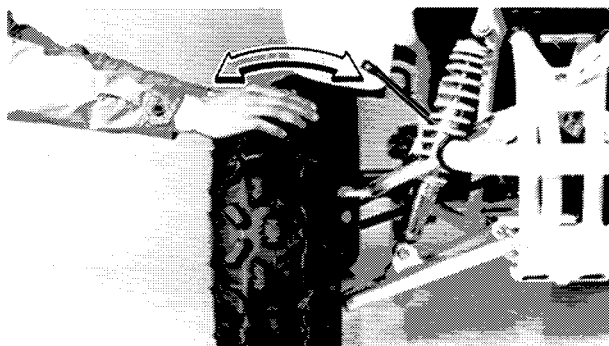

4. Raise the front end of the machine so that there is no weight on the front wheels.



5. Check:

- Ball joints and/or wheel bearings

Move the wheels laterally back and forth. Excessive free play → Replace the front arms and/or wheel bearings.

Refer to the "FRONT SHOCK ABSORBER AND FRONT ARMS" and "FRONT WHEEL AND FRONT BRAKE" section in the CHAPTER 6.

3

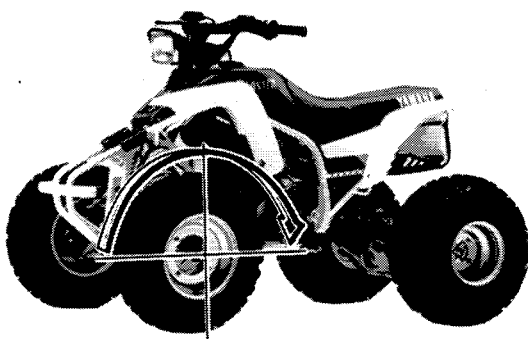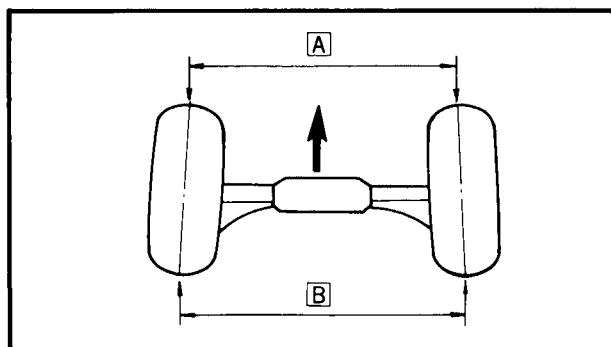

TOE-IN ADJUSTMENT

1. Place the machine on a level place.

2. Measure:

- Toe-in

Out of specification → Adjust.

Toe-in measurement steps:

- Mark both front tire tread centers.
- Raise the front end of the machine so that there is no weight on the front tires.
- Fix the handlebar straight ahead.
- Measure the width [A] between the marks.
- Rotate the front tires 180 degrees until the marks come exactly opposite.
- Measure the width [B] between the marks.
- Calculate the toe-in using the formula given below.

$$\text{Toe-in} = [B] - [A]$$



Toe-in:
0 ~ 10 mm (0 ~ 0.39 in)

- If the toe-in is incorrect, adjust the toe-in.