


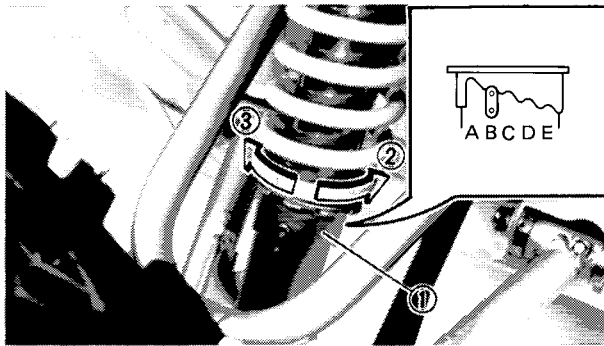

1. Adjust:

• Spring preload

Turn the adjuster ① to increase or decrease the spring preload.

Front Shock Absorber Preload			
Preload	Softer ② ←	Standard	Stiffer ③ →
Position	A	B	C, D, E


REAR SHOCK ABSORBER ADJUSTMENT

⚠ WARNING:

This shock absorber contains highly pressurized nitrogen gas. Read and understand the following information before handling the shock absorber. The manufacture cannot be held responsible for property damage or personal injury that may result from improper handling.

- Do not tamper with or attempt to open the cylinder assembly.
- Do not subject shock absorber to an open flame or other high heat source. This may cause the unit to explode due to excessive gas pressure.
- Do not deform or damage the cylinder in any way. Cylinder damage will result in poor damping performance.

3

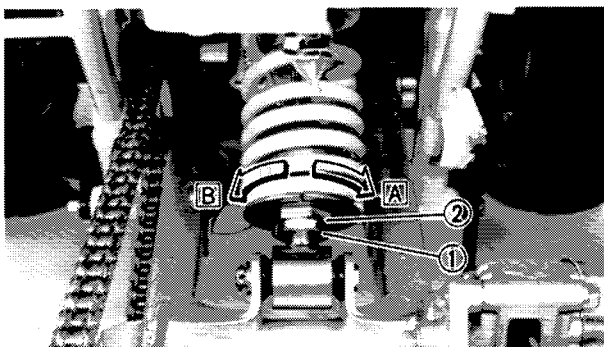

1. Adjust:

• Spring preload

Adjustment steps:

- Elevate the rear wheels by placing the suitable stand.
- Loosen the locknut ①.
- Adjust the spring preload.

NOTE:

The length of the spring (Installed) changes 1.5 mm (0.06 in) per turn of the adjuster.

Turn adjuster ② clockwise A	Increase the spring preload.
Turn adjuster ② counterclockwise B	Decrease the spring preload.