



- 2) Tire pressure below the minimum specified could cause the tire to dislodge from the rim under severe riding conditions.

The following are minimums:

Front 27 kPa (0.27 kg/cm², 3.8 psi)

Rear 22 kPa (0.22 kg/cm², 3.1 psi)

- 3) Use no more than

Front 250 kPa (2.5 kg/cm², 36 psi)

Rear 190 kPa (1.9 kg/cm², 27 psi)

When seating the tire beads. Higher pressures may cause the tire to burst.

Inflate the tires very slowly and carefully.


Fast inflation could cause the tire to burst.

• **MAXIMUM LOADING LIMIT**

- 1) Vehicle load limits: 100 kg (220 lb)*

*Total weight of cargo, rider, and accessories.

3

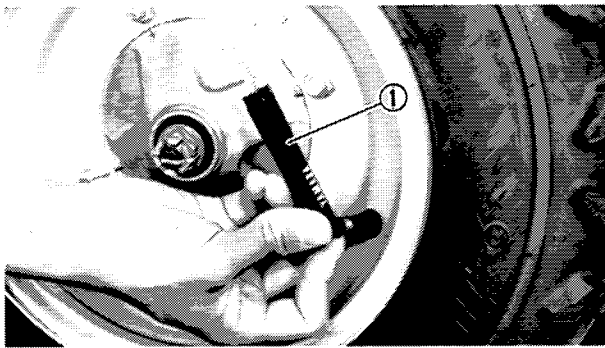

1. Measure:

- Tire pressure (Cold tire pressure)
Out of specification → Adjust.

NOTE:

The low-pressure tire gauge ① is included in the standard equipment.

If dust or the like is stuck to this gauge, it does not provide correct readings. Therefore, make two measurements on the tire pressure and get the second reading.

Cold Tire Pressure	Front	Rear
Standard	30 kPa (0.3 kg/cm ² , 4.3 psi)	25 kPa (0.25 kg/cm ² , 3.6 psi)
Minimum	27 kPa (0.27 kg/cm ² , 3.8 psi)	22 kPa (0.22 kg/cm ² , 3.1 psi)
Maximum	33 kPa (0.33 kg/cm ² , 4.7 psi)	28 kPa (0.28 kg/cm ² , 4.0 psi)