

**⚠ WARNING:**

Uneven or improper tire pressure may adversely affect the handling of this machine and may cause loss of control.

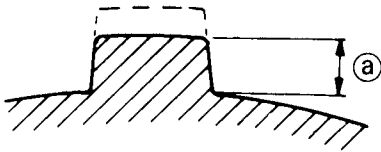
- Maintain proper tire pressures.
- Set tire pressures when the tires are cold.
- Tire pressures must be equal in both front tires and equal in both rear tires.

2. Inspect:

- Tire surfaces
Wear/Damage → Replace.



Tire Wear Limit (a) :
Front and Rear: 3.0 mm (0.12 in)

**⚠ WARNING:**

It is dangerous to ride with a wornout tire. When a tire wear is out of specification, replace the tire immediately.

WHEEL INSPECTION

1. Inspect:

- Wheels
Damage/Bends → Replace.

NOTE:

Always balance the wheel when a tire or wheel has been changed or replaced.

⚠ WARNING:

- Never attempt even small repairs to the wheel.
- Ride conservatively after installing a tire to allow it to seat itself properly on the rim.