


STEERING COLUMN BUSHING LUBRICATION/ HEADLIGHT BEAM ADJUSTMENT/ HEADLIGHT BULB REPLACEMENT

**INSP
ADJ**

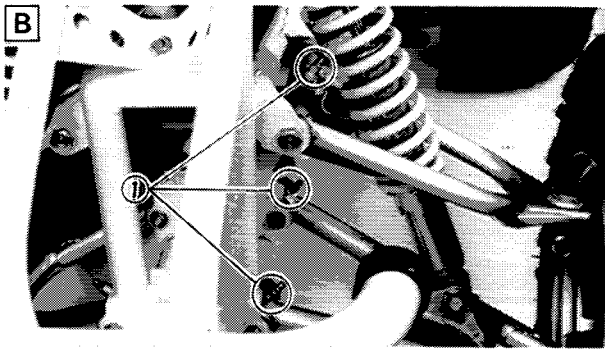

NOTE: _____
Thoroughly wipe off the excess grease.

B Left side


STEERING COLUMN BUSHING LUBRICATION

1. Inject grease from the nipple ① using a grease gun.



Lightweight Lithium-soap
Base Grease


3

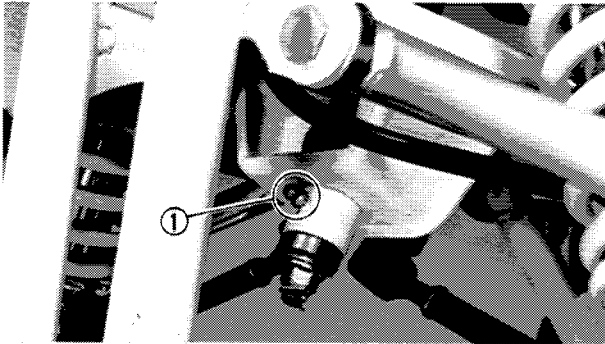

ELECTRICAL

HEADLIGHT BEAM ADJUSTMENT

1. Loosen:
 - Bolts ① (Headlight unit)
2. Adjust:
 - Headlight beam (Vertical)

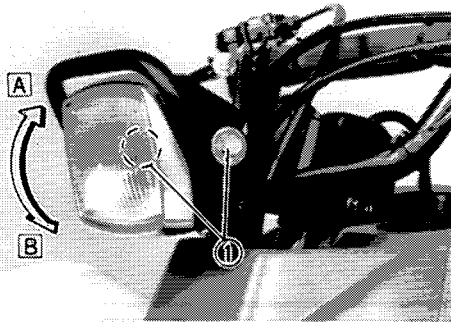

Tilt upward A	Headlight beam is higher.
Tilt downward B	Headlight beam is lower.

3. Tighten the bolts in the proper position.

HEADLIGHT BULB REPLACEMENT

1. Remove:
 - Screws ① (Headlight unit)
 - Headlight unit ②

