



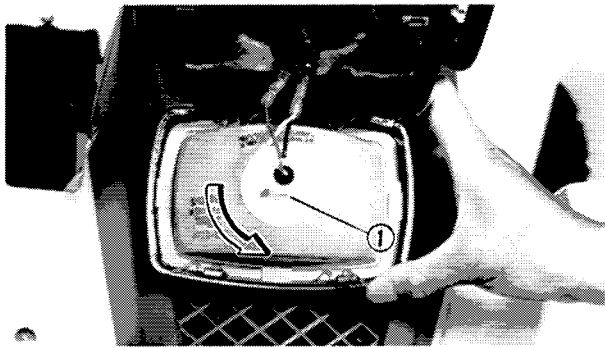

2. Remove:

- Bulb holder ①

Turn the bulb holder ① counterclockwise.

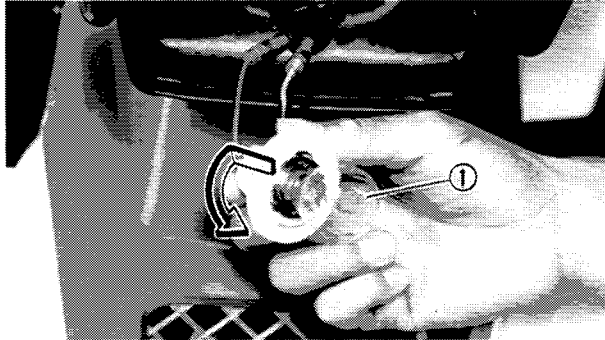


3. Remove:

- Bulb ① (Defective)

While pushing the bulb ①, turn it counterclockwise.

⚠ WARNING:

Keep flammable products or your hands away from the bulb while it is on, it will be hot. Do not touch the bulb until it cools down.

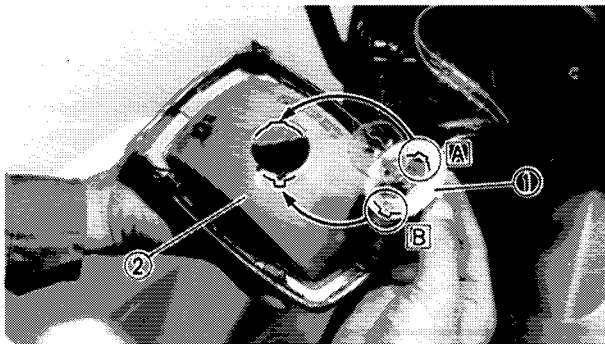

4. Install:

- Bulb (New)
(to bulb holder)

5. Install:

- Bulb holder ①

NOTE:

Make sure the projections (Large **A** and small **B**) on the bulb holder are meshed with the slots on the light case ②.

6. Install:

- Headlight unit

7. Adjust:

- Headlight beam (Vertical)

Refer to the "HEADLIGHT BEAM ADJUSTMENT" section.

TAIL LIGHT REPLACEMENT

1. Remove:

- Screws ① (Tail light unit)
- Tail light unit ②

