



SPARK PLUG INSPECTION

1. Inspect:

- Spark plug type
Incorrect → Replace.

Standard Spark Plug:

- For U.S.A., Oceania
D8ES (NGK) or W24ES (NIPPONDENSO)
- For CANADA, S. Africa
DP8ES (NGK)

2. Inspect:

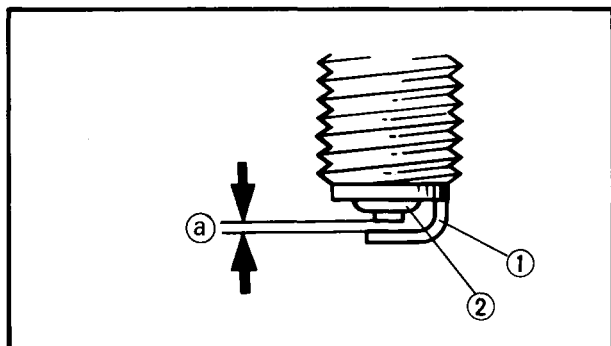
- Electrode ①
Wear/Damage → Replace.
- Insulator color ②
Normal condition is a medium to light tan color.
Distinctly different color → Check the engine condition.

3. Clean:

- Spark plug
Clean the spark plug with a spark plug cleaner or wire brush.

4. Measure:

- Spark plug gap ③
Out of specification → Regap.
Use a wire gauge.

**Spark Plug Gap:**

0.7 ~ 0.8 mm (0.028 ~ 0.032 in)

5. Tighten:

- Spark plug

NOTE:

Before installing a spark plug, clean the gasket surface and plug surface.

**Spark Plug:**

25 Nm (2.5 m·kg, 18 ft·lb)

NOTE:

If a torque wrench is not available when you are installing a spark plug, a good estimate of the correct torque is 1/4 to 1/2 turns part finger tight. Have the spark plug torqued to the correct value as soon as possible with a torque wrench.