
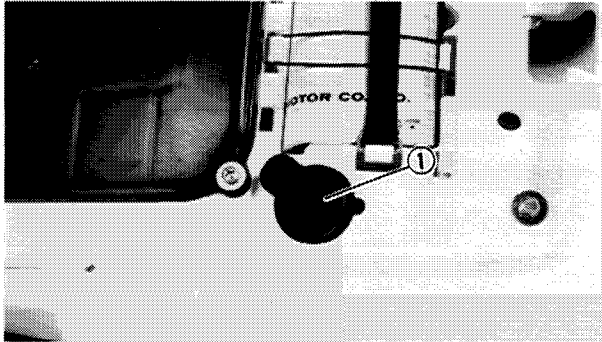


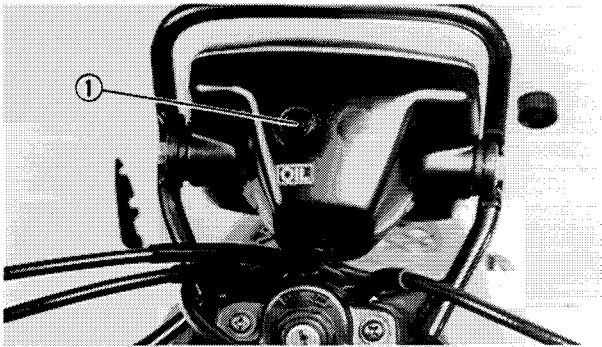

3

NOTE:

If the main switch is turned off after the "OIL" warning light ① goes out and then immediately again the main switch is turned on, the "OIL" warning light may not come on. This is not because of failure.

CAUTION:

Always use the same type of engine oil; mixing oils may result in a harmful chemical reaction and lead to poor performance.


NOTE:

Be sure to push the filler cap ① into the filler neck until it is properly seated.

TRANSMISSION OIL LEVEL INSPECTION

1. Inspect:

- Transmission oil level
- Oil level low → Add sufficient oil.

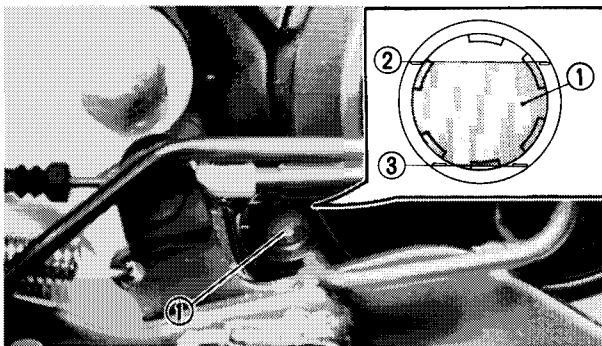**Transmission oil level inspection steps:**

- Place the machine on a level place.
- Warm up the engine for several minutes, and stop it.
- Visually check the oil level through the level window ①.

NOTE:

The oil level should be confirmed between maximum ② and minimum ③ marks.

- If the oil level is lower, then add sufficient oil to raise it to the proper level.



Recommended Oil:
Yamalube 4 (10W-30) or SAE
10W30 type SE motor oil.

CAUTION:

- Do not add any chemical additives. Transmission oil also lubricates the clutch and additives could cause clutch slippage.
- Be sure no foreign material enters the crank-case.