



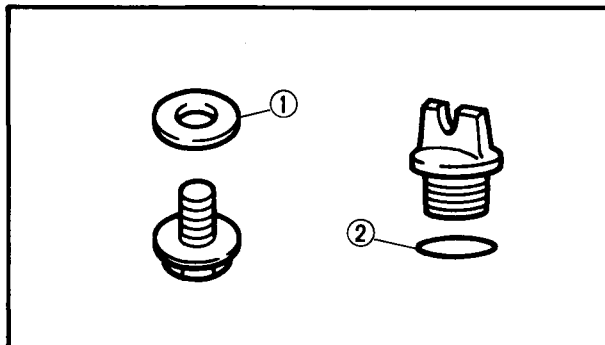

TRANSMISSION OIL REPLACEMENT

1. Place the machine on a level place.
2. Warm up the engine for several minutes, and stop it.
3. Place an oil pan under the engine.
4. Remove:
 - Filler plug ①
 - Drain plug ②
 Drain the transmission oil.
5. Inspect:
 - Gasket ① (Drain plug)
 - O-ring ② (Filler plug)
 Damage → Replace.
6. Tighten:
 - Drain plug

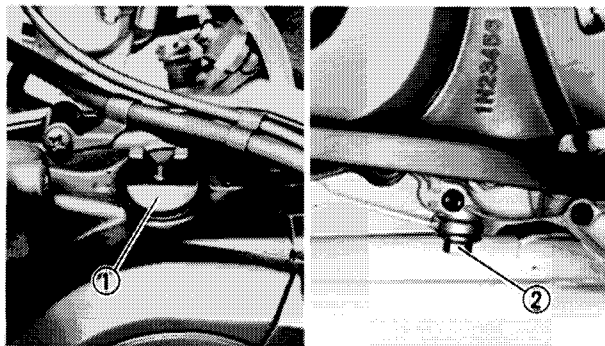

Drain Plug:
20 Nm (2.0 m·kg, 14 ft·lb)

3

7. Fill:
 - Crankcase



Recommended Oil:
Yamalube 4 (10W-30) or
SAE 10W30 type SE motor oil
Periodic Oil Change:
0.65 L (0.57 Imp qt, 0.69 US qt)

CAUTION:

- Do not add any chemical additives. Transmission oil also lubricates the clutch and additives could cause clutch slippage.
- Be sure no foreign material enters the crankcase.

8. Install:
 - Filler plug
9. Inspect:
 - Oil leaks
 - Oil level

NOTE:

Wipe off any oil spilled on the crankcase.