


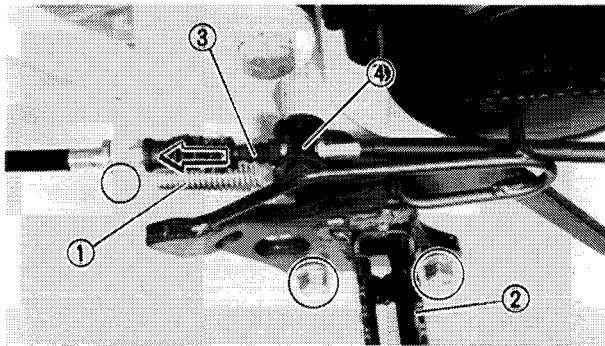

5. Disconnect:

- Spring ①


6. Remove:

- Footrest ② (Right)
(with rear brake pedal)

7. Pull back the brake cable stopper cover ③ .


8. Remove:

- Pin ④ (Parking brake cable)

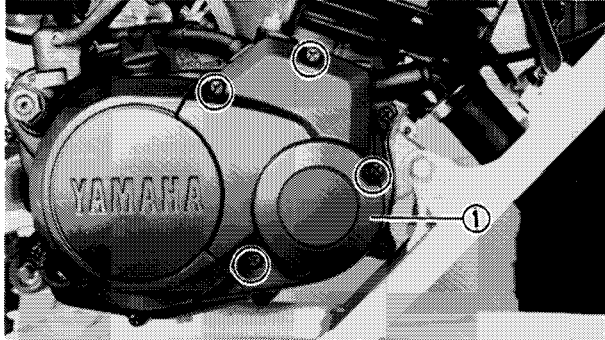

9. Remove:

- Autolube pump cover ①

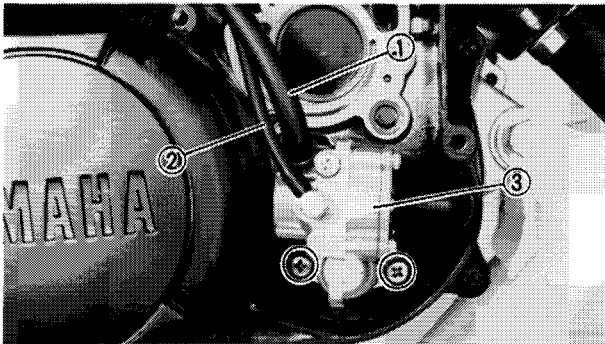

10. Disconnect:


- Oil hose ①
- Oil delivery hose ②

NOTE:

Plug the oil hose ① so that oil does not run out of the oil tank.


11. Remove:

- Autolube pump ③
- Gasket (Autolube pump)

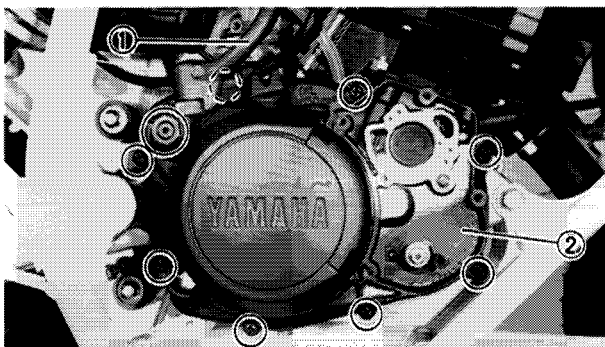

12. Remove:

- Kick crank ①
- Crankcase cover (Right) ②
- Dowel pin
- Gasket (Crankcase cover)

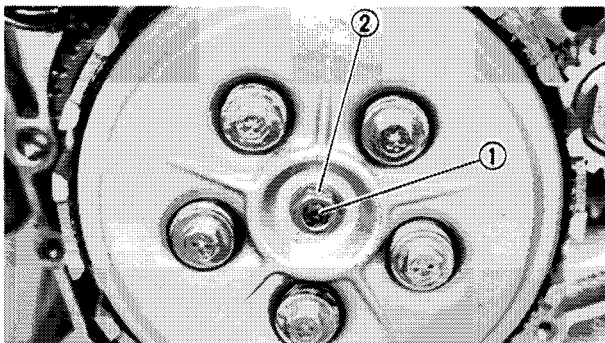

13. Adjust:

- Adjuster ① (Push rod #1)

Adjustment steps:

- Loosen the locknut ② .
- Move the push lever ③ toward the front with your finger until it stops.