
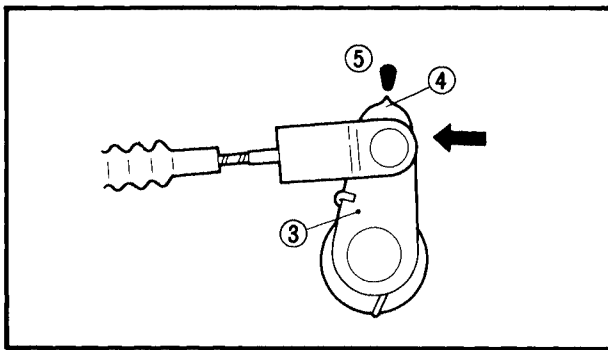


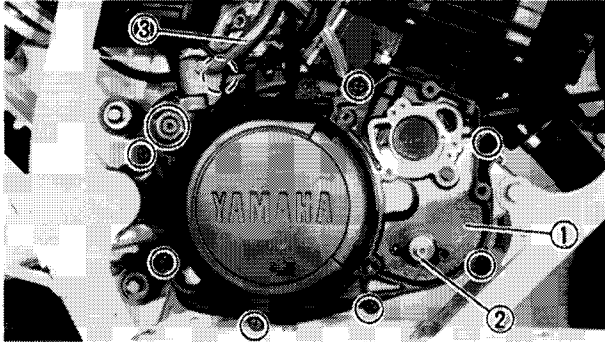

- With the push lever in this position, turn the adjuster ① to align the mark ④ on the end of the push lever with the mark ⑤ (protrusion) on the crankcase.
- Tighten the locknut ②.

**Locknut:**

7 Nm (0.7 m·kg, 5.1 ft·lb)

**14. Install:**

- Dowel pin
- Gasket (Crankcase cover)
- Crankcase cover ① (Right)

NOTE:

- When installing the crankcase cover, engage the autolube pump drive gear with its driven gear as slowly turn the autolube pump shaft ②.
- Tighten the crankcase cover holding screws in stage, using a crisscross pattern.

**Screw (Crankcase Cover):**

10 Nm (1.0 m·kg, 7.2 ft·lb)

15. Install:


- Kick crank ③

NOTE:

Install the kick crank so that it does not contact the case.

**Nut (Kick Crank):**

65 Nm (6.5 m·kg, 47 ft·lb)

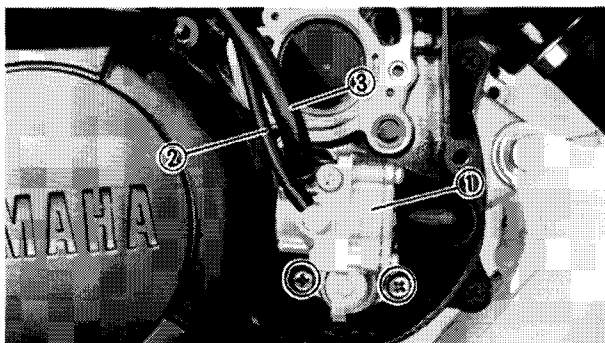**16. Install:**

- Gasket (Autolube pump)
- Autolube pump ①

**Screw (Autolube Pump):**

5 Nm (0.5 m·kg, 3.6 ft·lb)

17. Connect:

- Oil delivery hose ②
- Oil hose ③