




FUEL LEVEL ADJUSTMENT

NOTE:

Before adjusting the fuel level, the float height should be adjusted.

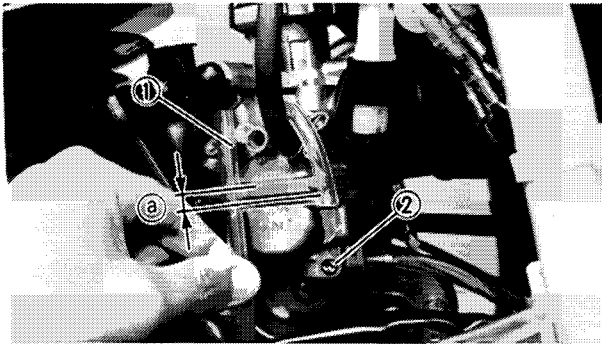

1. Measure:

- Fuel level
Out of specification → Adjust.

Fuel level measurement and adjustment steps:

- Place the machine on a level place.
- Attach the Fuel Level Gauge ① to the float chamber nozzle.



Fuel Level Gauge:
P/N YM-01312-A
P/N 90890-01312

- Loosen the drain screw ② and start the engine.
- Place tube vertically next to the center of the mating line of the mixing body and float chamber cover.
- Measure the fuel level ③ with gauge.



Fuel Level ③ :
0.5 ~ 1.5 mm (0.02 ~ 0.06 in)
Above the Carburetor Body Edge

- If the fuel level is incorrect, adjust the fuel level.
- Remove the carburetor.
- Inspect the valve seat and needle valve.
- If either is worn, replace them both.
- If both are fine, adjust the float height by bending the float tang ① on the float.
- Recheck the fuel level.

