





CARBURETOR SETTING CHANGE

In extremely cold weather, it is necessary to change carburetor setting to maintain optimum engine performance and to prevent engine damage.

- 1. Remove:
 - Carburetor assemblyRefer to "CARBURETOR – REMOVAL" section.
- 2. Adjust:
 - Carburetor setting

Carburetor setting chart		
Temperature	Main jet	Jet needle
0°C (32°F) above (STD)	#220	2nd groove
+5°C (41°F) ~ -15°C (5°F)	#230	2nd groove
-10°C (14°F) ~ -30°C (-22°F)	#230	3rd groove

① Main jet number

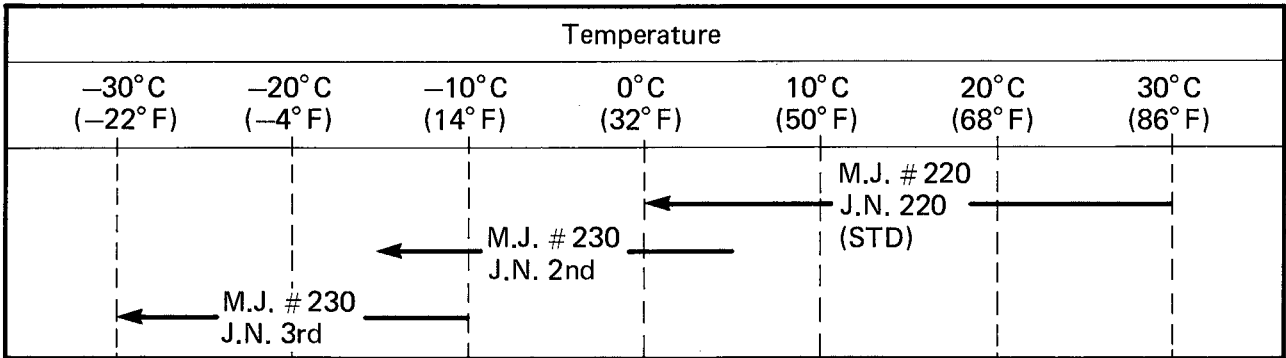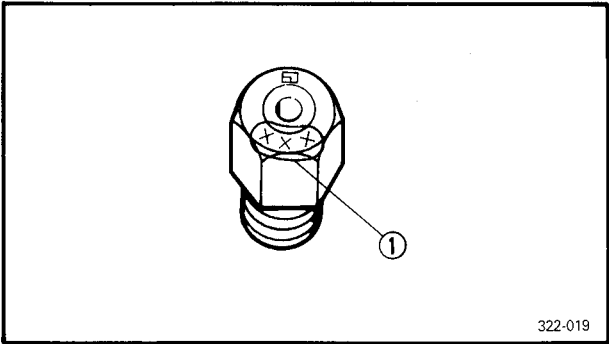

- 3. Install:
 - Carburetor assemblyRefer to "CARBURETOR – INSTALLATION" section.