




2. Measure:


- Valve stopper height (a)
Out of specification → Adjust stopper/
Replace valve stopper.

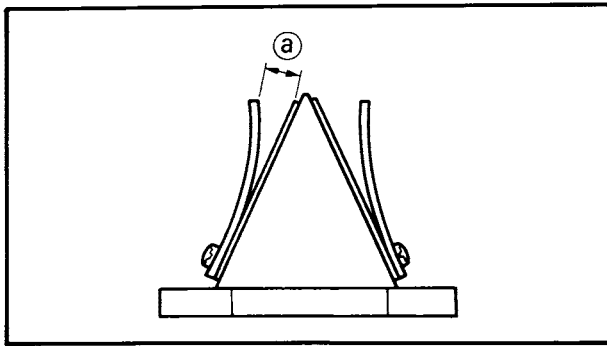

Valve Stopper Height:
8.3 ~ 8.7 mm (0.33 ~ 0.34 in)

NOTE:

If it is 0.4 mm (0.016 in) more or less than specified, replace the valve stopper.

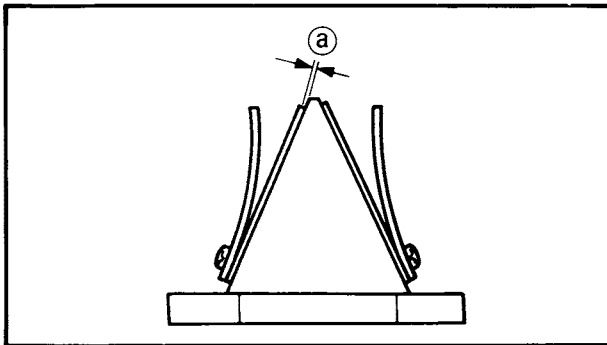


3. Measure:

- Reed valve bending limit (a)
Out of specification → Replace.



Reed Valve Bending Limit:
0.5 mm (0.02 in)

5

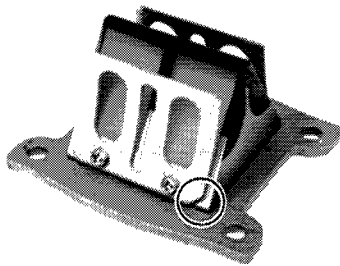

ASSEMBLY

When assembling the reed valve, reverse the disassembly procedure. Note the following points.

1. Install:

- Reed valve
- Reed valve stopper

NOTE:

Note the cut in the lower corner of the reed and stopper plate.

2. Tighten:

- Screws (Reed valve)



Screws (Reed Valve):
1 Nm (0.1 m·kg, 0.7 ft·lb)
LOCTITE®

NOTE:

Tighten each screw gradually to avoid warping.