




REMOVAL


NOTE:

The following parts can be cleaned and inspected without disassembly.


- Starter plunger
- Pilot air screw

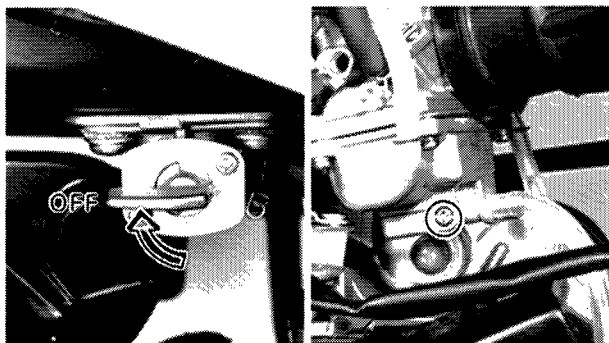


1. Turn the fuel cock to off.
2. Drain:
 - FuelFrom float chamber.

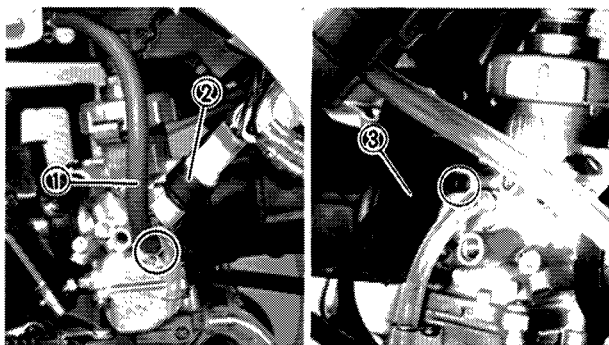

3. Disconnect:
 - Fuel hose ①
 - Carburetor switch coupler ②
 - Oil delivery hose ③

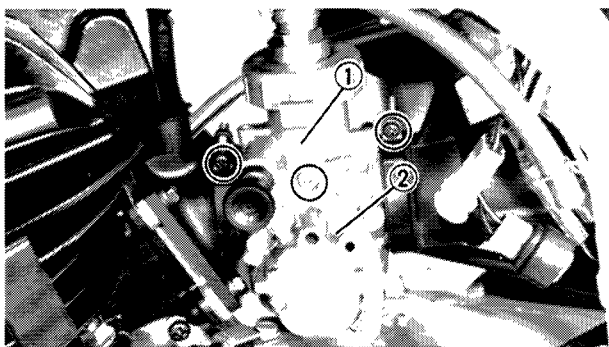

4. Remove:
 - Stopper plate ①
 - Carburetor assembly ②

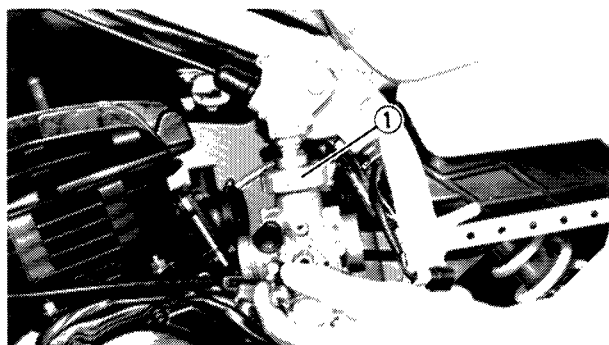

5. Remove:
 - Top cover ①