


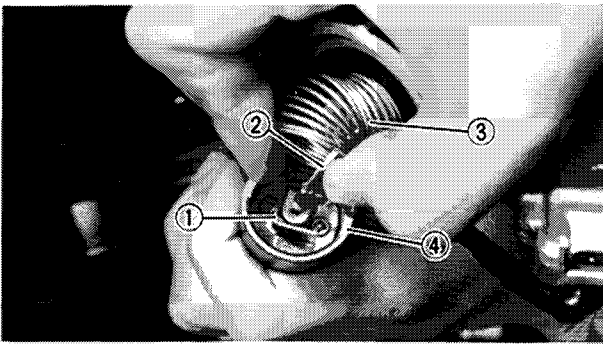


6. Remove:

- Holder ①
- Throttle cable ②
- From throttle valve.
- Spring ③
- Throttle valve ④

DISASSEMBLY


1. Remove:

- Float chamber ①

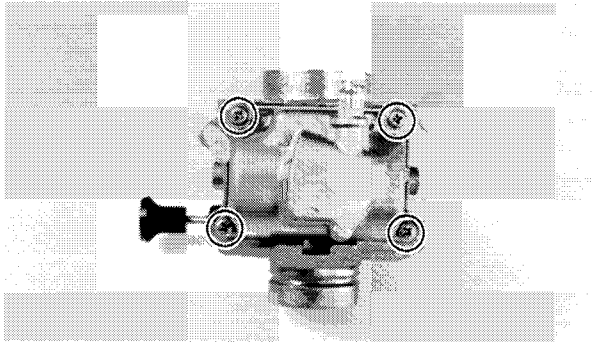


2. Remove:

- Float pin ①
- Float ②
- Needle valve

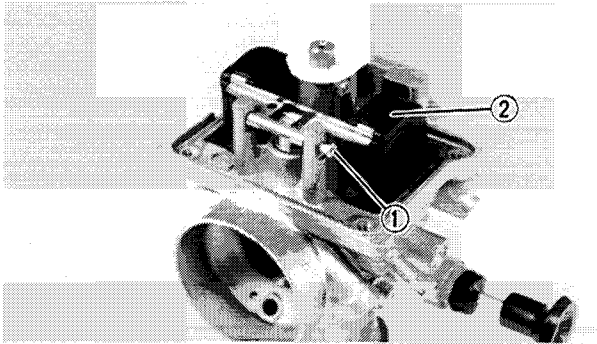

3. Remove:

- Valve seat ①

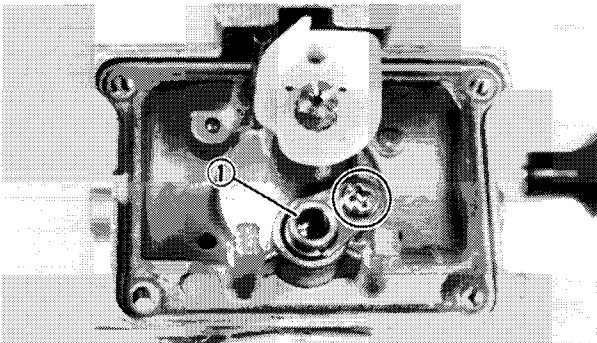

4. Remove:

- Main jet ring ①
- Main jet ②
- Main nozzle ③

