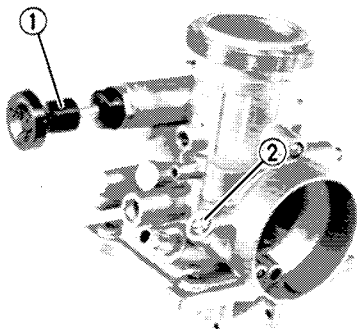
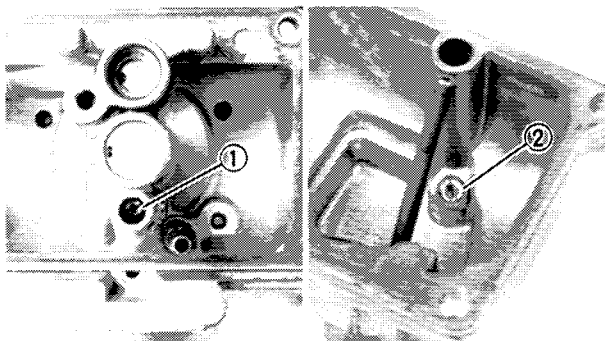


5. Remove:

- Pilot jet ①
- Starter jet ②

6. Remove:

- Starter plunger ①
- Pilot air screw ②

7. Remove:

- Throttle valve ①
- Jet needle ②

8. Remove:

- Carburetor top ①

9. Remove:

- Cover (Carburetor switch – Right) ①

