



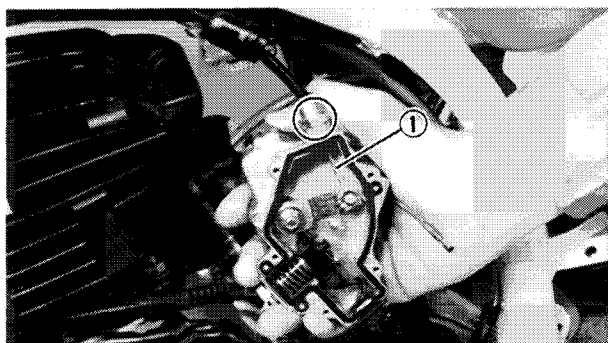


10. Remove:

- Throttle cable ①

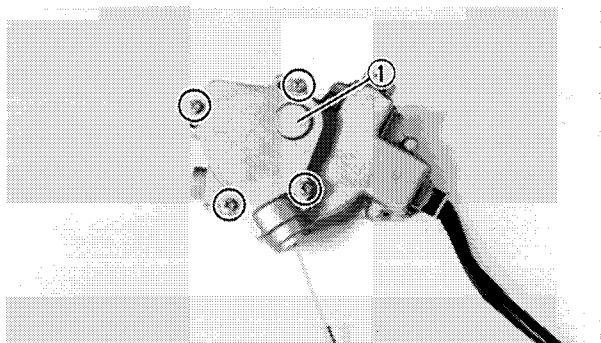

11. Remove:

- Cover (Carburetor switch — Left) ①
- Throttle valve cable

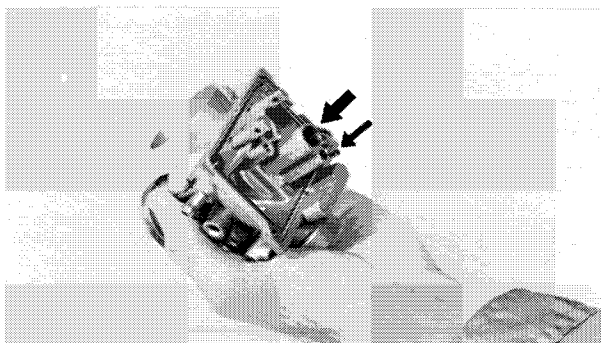


INSPECTION

1. Inspect:

- Carburetor body
Contamination → Clean.

NOTE:

Use a petroleum based solvent for cleaning.
Blow out all passages and jets with compressed air.

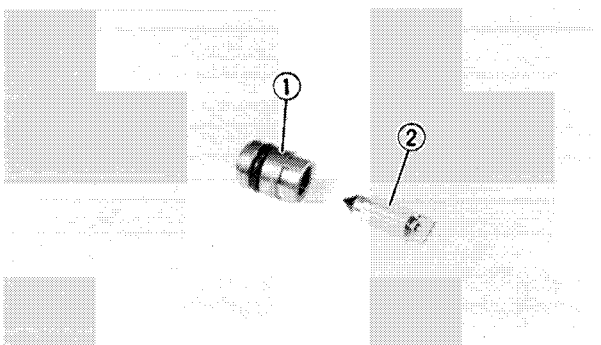


2. Inspect:

- Valve seat ①
- Needle valve ②
Wear/Contamination → Replace.

NOTE:

Always replace the needle valve and valve seat as a set.

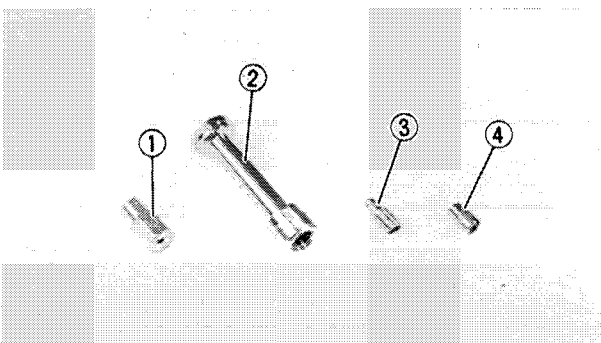

3. Inspect:

- Main jet ①
- Main nozzle ②
- Pilot jet ③
- Starter jet ④
Wear → Replace.
Contamination/Clog → Clean.

NOTE:

Blow out the jets with compressed air.