



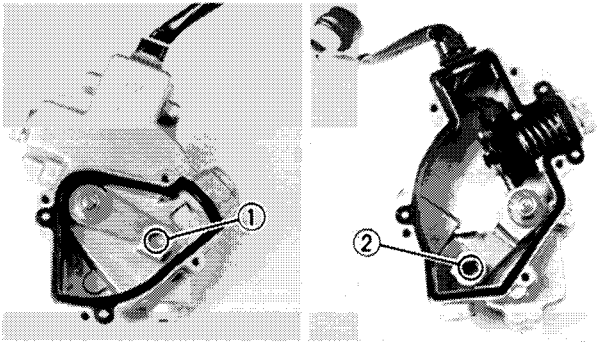


1. Apply:
 - Lithium base grease
 - Lightly grease to the cable pivot ① , ② .
2. Install:
 - Throttle cable
 - Throttle valve cable
 - Covers (Carburetor switch)

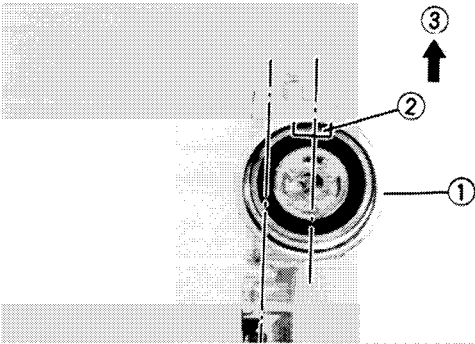

3. Install:
 - Washer
 - Carburetor top ①

NOTE:

Install the carburetor top ① with its tab ② forward ③ .

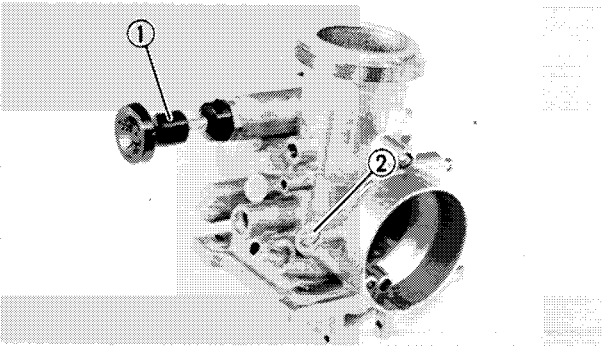


4. Install:
 - Starter plunger ①



Starter Plunger:
3 Nm (0.3 m·kg, 2.2 ft·lb)

5. Adjust:
 - Pilot air screw ②


Pilot Air Screw:
1 and 1/2 turns out

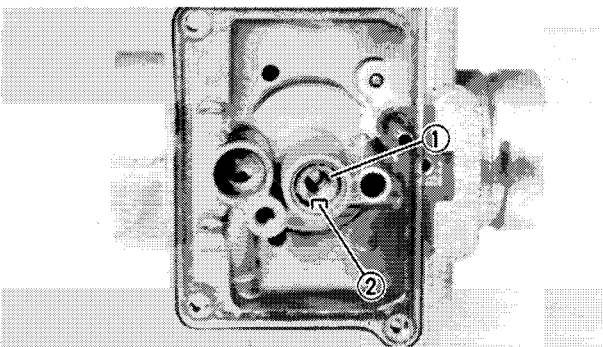

6. Install:
 - Starter jet
 - Pilot jet
 - Main nozzle ①
 - Main jet

NOTE:

Be sure the pin ② engages with the locating slot on the main nozzle ① .

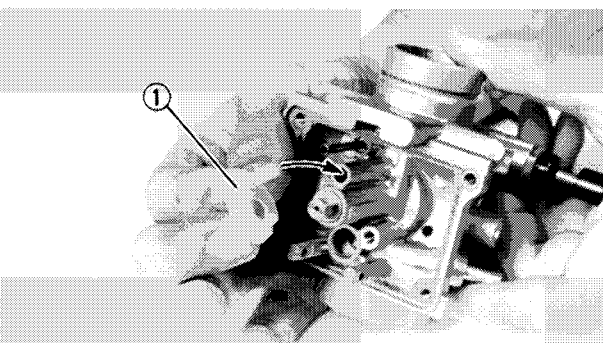

Main Jet:
2 Nm (0.2 m·kg, 1.4 ft·lb)

7. Install:
 - Main jet ring ①