



8. Install:


- Valve seat
- Needle valve
- Float
- Float pin



Screw (Valve Seat Stopper):
2 Nm (0.2 m·kg, 1.4 ft·lb)

9. Measure:

- Float height (a)
- Out of specification → Adjust.

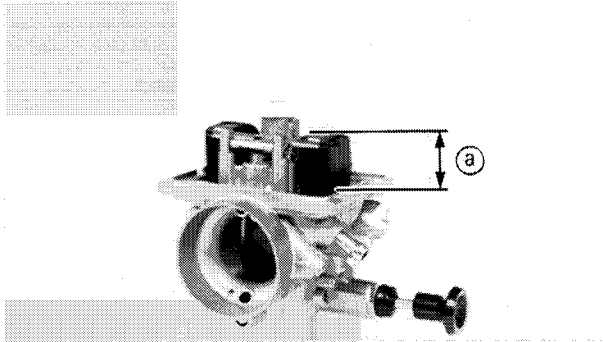

Float height measurement and adjustment steps:

- Hold the carburetor in an upside down position.
- Measure the distance between the mating surface of the float chamber (gasket removed) and top of the float using a gauge.




Float Height:
20.0 ~ 21.5 mm (0.79 ~ 0.85 in)

NOTE: _____

The float arm should be resting on the needle valve, but not compressing the needle valve.

- If the float height is not within specification, inspect the valve seat and needle valve.
- If either is worn, replace them both.
- If both are fine, adjust the float height by bending the float tang ① on the float.
- Recheck the float height.

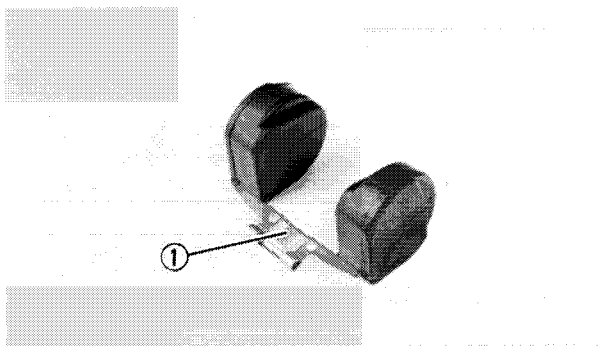

10. Install:

- Float chamber



Screw (Float Chamber):
2 Nm (0.2 m·kg, 1.4 ft·lb)

INSTALLATION

Reverse the "REMOVAL" procedures.
Note the following points.