





REMOVAL

1. Place the machine on a level place.
2. Apply the parking brake ① .

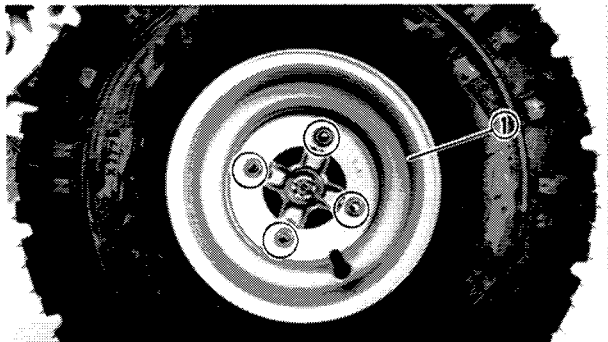

3. Loosen:
 - Nuts (Rear wheel)
4. Elevate the rear wheels by placing the suitable stand under the rear of frame.
5. Remove:
 - Rear wheels ①

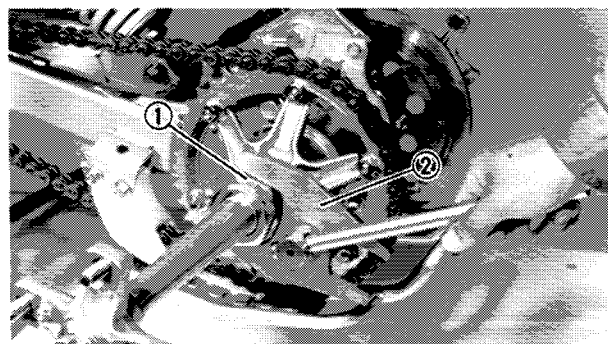


6. Tighten:
 - Nut ① (Rear axle – Inner)

Give 1/8 clockwise turn using the nut wrench ② .



Nut Wrench:
P/N. YM-37132
P/N. 90890-01419

6

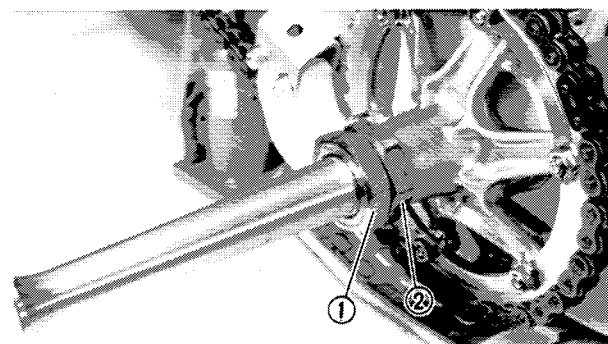


7. Loosen:
 - Nut ① (Rear axle – Outer)
 - Nut ② (Rear axle – Inner)

Use the Nut Wrench.



Nut Wrench:
P/N. YM-37132
P/N. 90890-01419

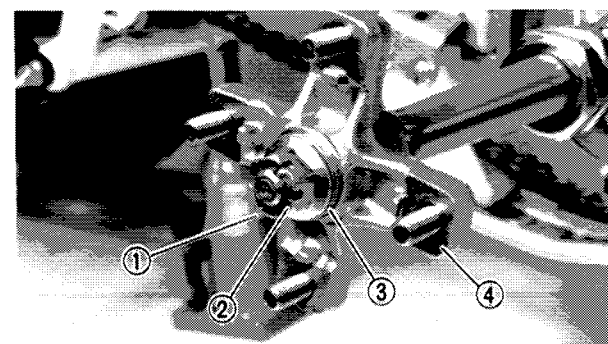

8. Remove:
 - Cotter pin ①
 - Nut ② (Wheel hub)
 - Plate washer ③
 - Wheel hub ④