

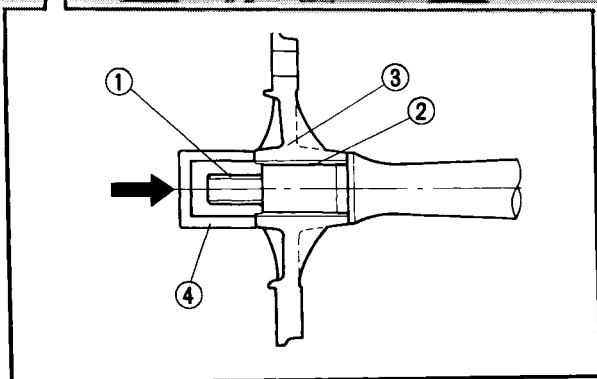


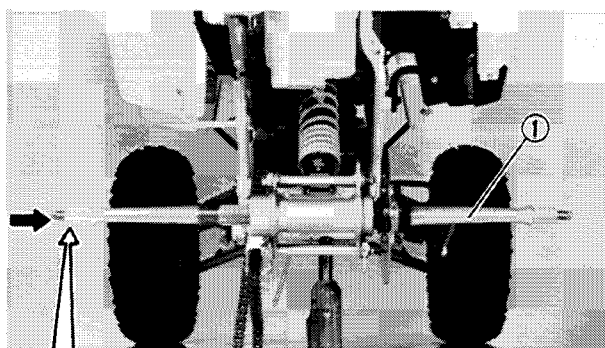

16. Remove:
- Rear axle ①
(from right side)

⚠ CAUTION:


- Never directly tap the axle end with a hammer, this will result in damage to the axle thread ① and spline ②.
- Install the wheel boss ③ and suitable socket ④ on the axle end to protect the thread and spline from damage.

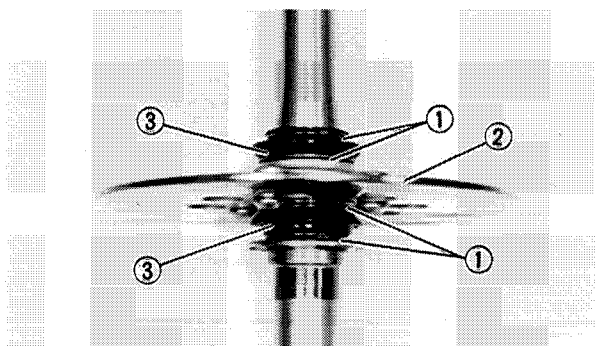

17. Remove:
- Wire clips ①
 - Disc hub ② (Brake disc)

⚠ CAUTION:

Remove the wire clip with strict attention paid not to damage the disc hub cover ③.

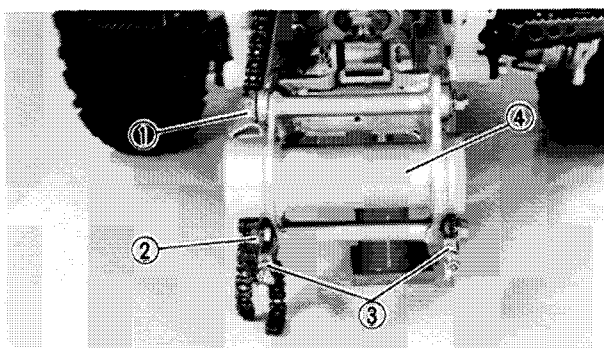

18. Remove:
- Bolt ① (Rear axle hub – Upper)
 - Bolt ② (Rear axle hub – Lower)
 - Chain tensioner assembly ③
 - Rear axle hub ④

INSPECTION

1. Inspect:
 - Wheel
Refer to the "WHEEL INSPECTION" section in the CHAPTER 3.
2. Measure:
 - Wheel runout
Refer to the "FRONT WHEEL AND FRONT BRAKE – INSPECTION" section.