



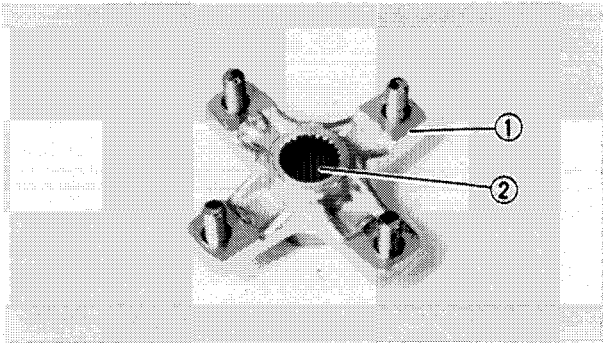


3. Inspect:

- Wheel hub ①
Cracks/Damage → Replace.
- Splines ② (Wheel hub)
Wear/Damage → Replace.

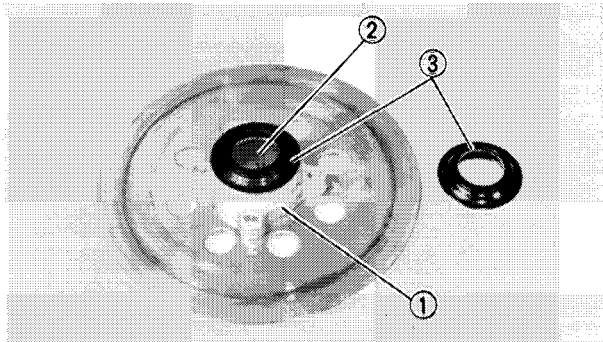


4. Inspect:

- Disc hub ①
Cracks/Damage → Replace.
- Splines ② (Disk hub)
Wear/Damage → Replace.
- Disc hub cover ③
Wear/Damage → Replace.

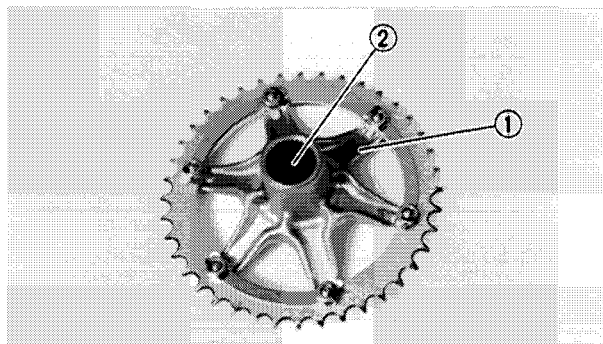


5. Inspect:

- Sprocket hub ①
Cracks/Damage → Replace.
- Splines ② (Sprocket hub)
Wear/Damage → Replace.

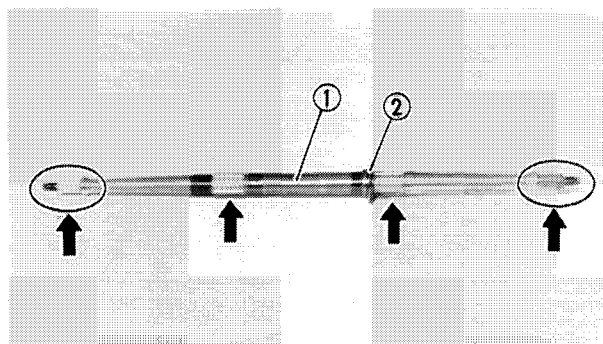

6. Inspect:

- Rear axle ①
Scratched (Excessively)/Damage → Replace.
- Splines/Threads (Rear axle)
Wear/Damage → Replace.
- Dust cover ② (Oil seal)
Damage → Replace.

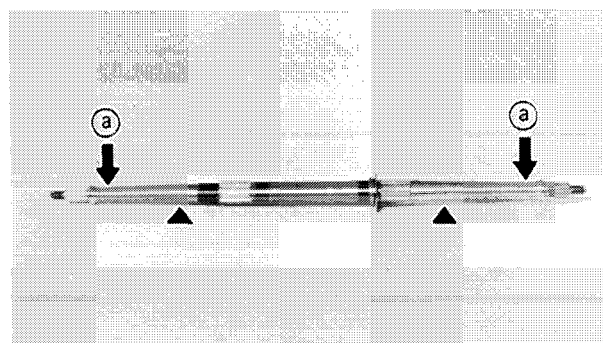

7. Measure:

- Rear axle runout ①
Out of specification → Replace.



Rear Axle Runout Limit:
1.5 mm (0.06 in)

⚠ WARNING:

Do not attempt to straighten a bent axle.