



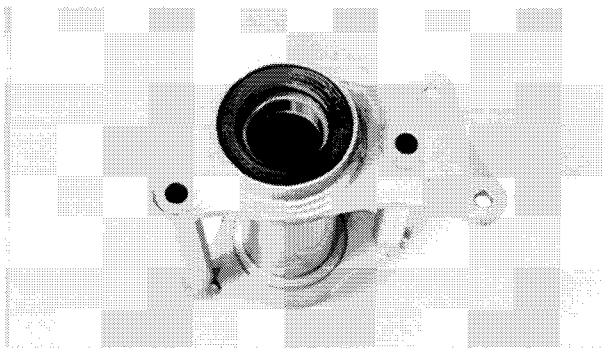


8. Inspect:

- Rear axle hub
Cracks/Bend/Damage → Replace.

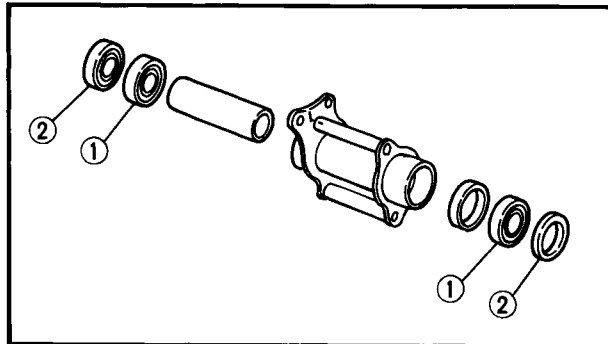

9. Inspect:

- Bearings ① (Rear axle hub)
Bearings allow play in the axle hub or the bearing turns roughly → Replace.
- Oil seals ②
Wear/Damage → Replace.

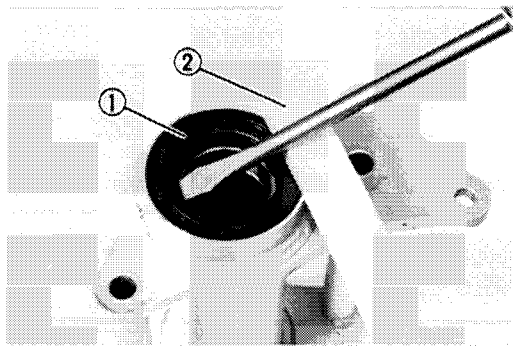

Rear axle hub bearing and oil seal replacement steps:

- Clean the outside of the rear axle.
- Remove the oil seal ① use a flat-head screw driver.

NOTE:

Place a wood block ② against the outer edge to protect this edge.

- Remove the bearing ③ using a general bearing puller.
- Install the new bearings and oils seal by reversing the previous steps.

NOTE:

Use a socket ④ that matches the outside diameter of the race of the bearing and oil seal.

⚠ CAUTION:

Do not strike the center race ⑤ or balls ⑥ of the bearing. Contact should be made only with the outer race ⑦.

