
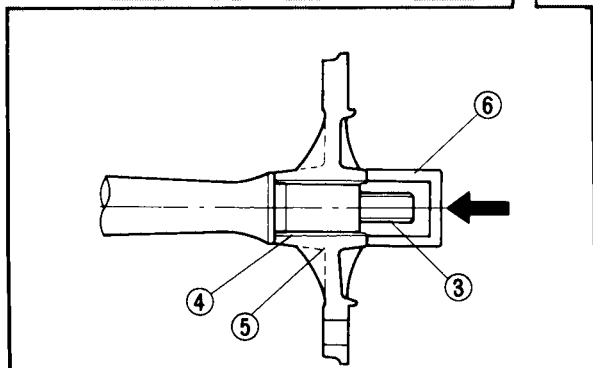
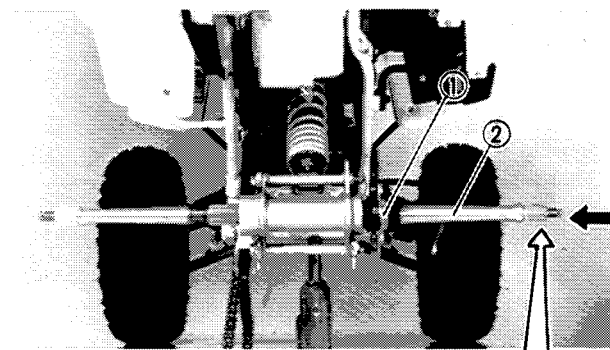
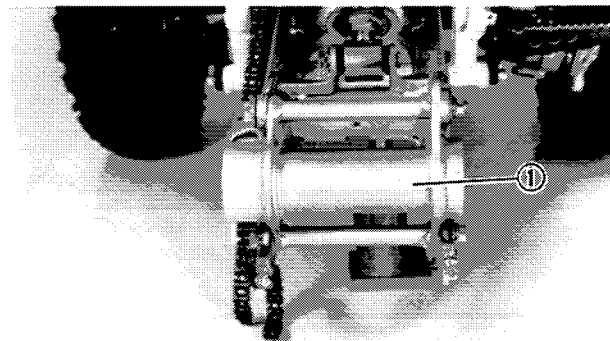
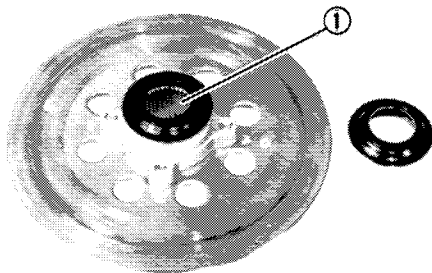


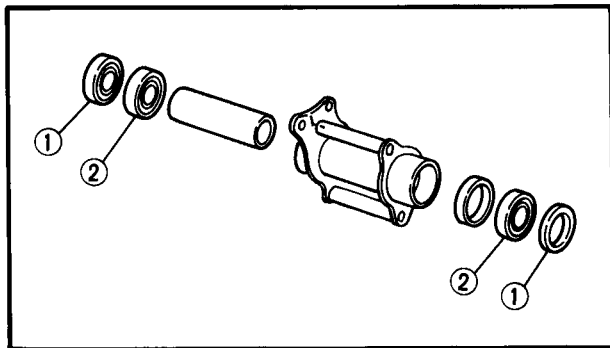

INSTALLATION

Reverse the "REMOVAL" procedures.

Note the following points.

1. Lubricate:

- Oil seal lips ① (Rear axle hub)
- Bearings ② (Rear axle hub)



**Lightweight Lithium-soap
Base Grease (Lightly)**

2. Lubricate:

- Splines ① (Brake disk hub)



**Lightweight Lithium-soap
Base Grease**

3. Install:

- Rear axle hub ①

NOTE:

At this time, the rear axle hub should not be tightened completely. Final tightening is done after the chain slack adjustment.

4. Install:

- Disc hub ① (Brake disc)
(to rear axle)
- Rear axle ②
Tap the RIGHT END axle.

⚠ CAUTION:

- Never directly tap the axle end with a hammer, this will result in damage to the axle thread ③ and spline ④.
- Install the wheel boss ⑤ and suitable socket ⑥ on the axle end to protect the thread and spline from damage.