
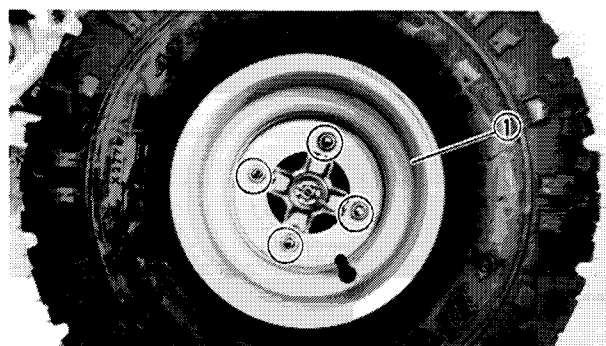
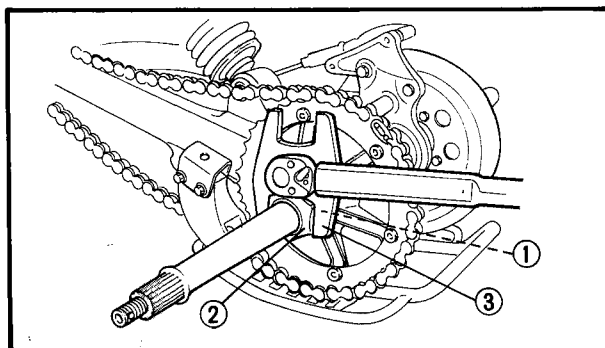
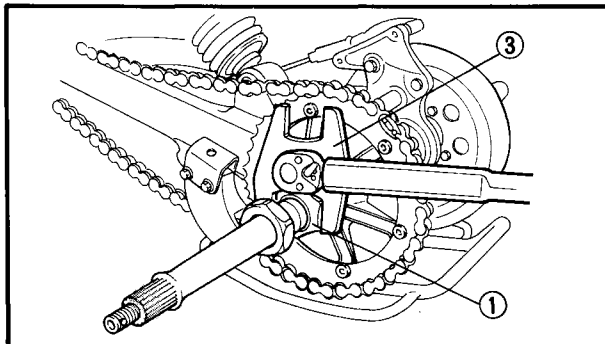


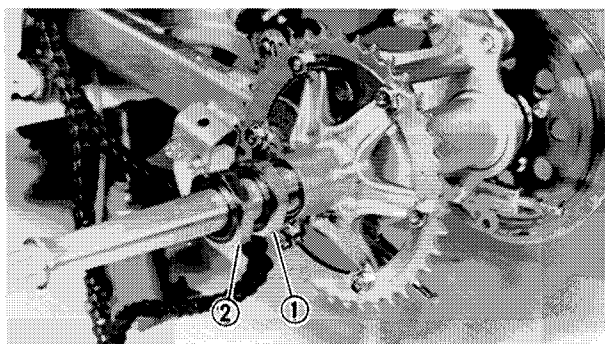

11. Tighten:

- Nut ① (Rear axle – Inner)
- Nut ② (Rear axle – Outer)

Rear axle nuts tightening steps:

NOTE:

Before tightening the nuts, apply the LOCTITE® to the thread portion of the rear axle.

- Tighten the nut (Inner) ① with the Nut Wrench ③ to specification while holding the rear axle.



Nut Wrench:
P/N. YM-37132
P/N. 90890-01419



Nut (Inner) – (First Tightening):
55 Nm (5.5 m·kg, 40 ft·lb)

- Hold the nut (Inner) ① and tighten the nut (Outer) ② with the Nut Wrench ③ to specification.



Nut (Outer):
190 Nm (19.0 m·kg, 140 ft·lb)

- Hold the nut (Outer) ② and tighten back the nut (Inner) ① with the Nut Wrench to specification.



Ring Nut (Inner) – (Final Tightening):
240 Nm (24.0 m·kg, 170 ft·lb)

12. Install:

- Rear wheels ①
- Nuts (Rear wheel) – (Temporary tighten)

13. Remove the stand and set the machine on the ground securely.

14. Tighten:

- Nuts (Rear wheel)



Nut (Rear Wheel):
45 Nm (4.5 m·kg, 33 ft·lb)