





REMOVAL

1. Place the machine on a level place.
2. Loosen:
 - Nuts (Front wheel)
 Apply the parking brake ①.
3. Elevate the front wheels by placing the suitable stand under the frame.

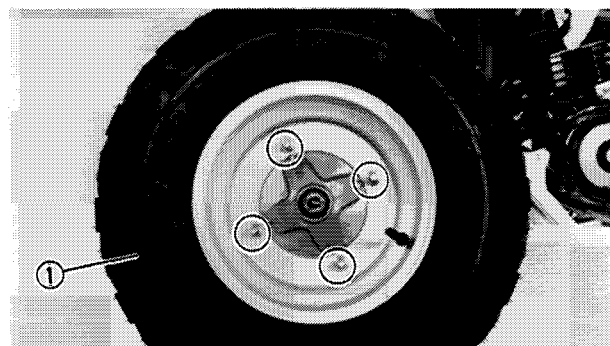


4. Remove:
 - Nuts (Front wheel)
 - Front wheel ①

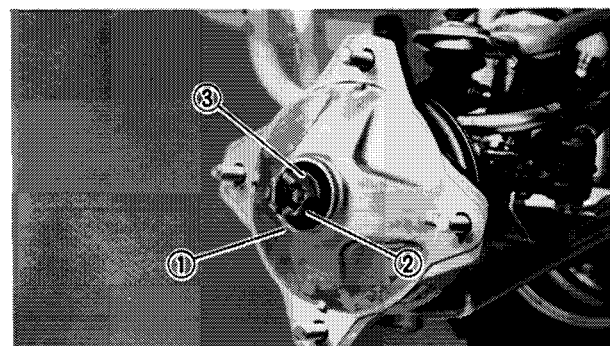


5. Remove:
 - Cotter pin ①
 - Nut ② (Wheel hub)
 - Plain washer ③

6

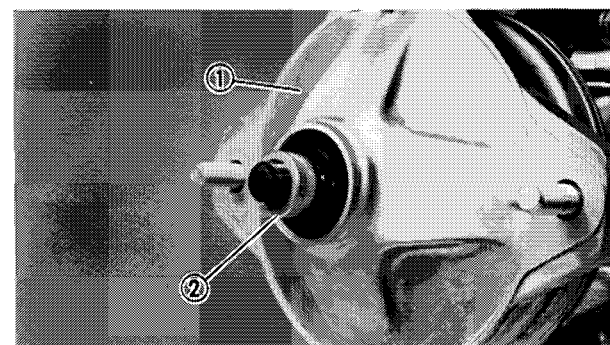

6. Remove:
 - Wheel hub ① (Front)
 - Collar ②

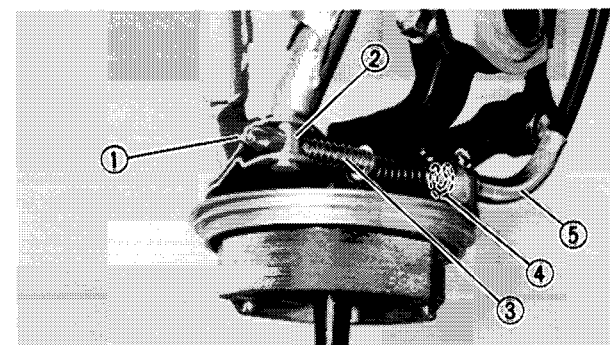

7. Remove:
 - Adjuster ①
 - Pin ②
 - Spring ③
 - Circlip ④
 - Brake cable ⑤
(from brake shoe plate)