


REMOVAL

⚠ CAUTION:

Disc brake components rarely require disassembly. DO NOT:


- Disassemble components unless absolutely necessary.
- Use solvents on internal brake component.

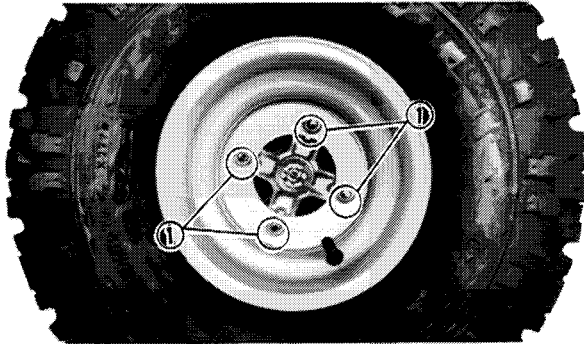


1. Place the machine on a level place.
2. Loosen:
 - Nuts ① (Rear wheel — Right)
3. Elevate the rear wheels by placing the suitable stand under the frame.

4. Remove:
 - Rear wheel (Right)
5. Apply the parking brake.

6

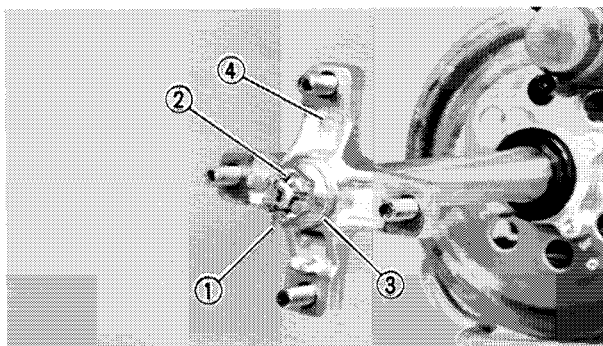

6. Remove:
 - Cotter pin ①
 - Nut ② (Wheel hub)
 - Plate washer ③
 - Wheel hub ④
7. Release the parking brake.

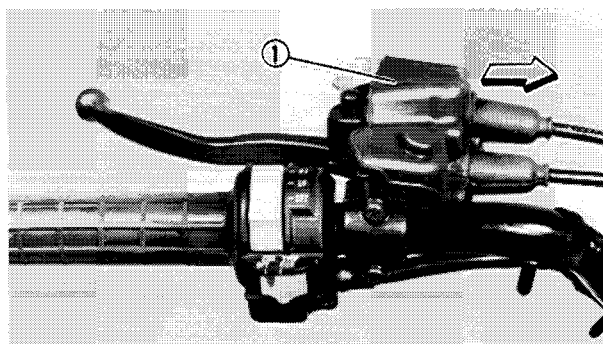

8. Pull back the cable adjuster cover ① from the clutch lever holder.