




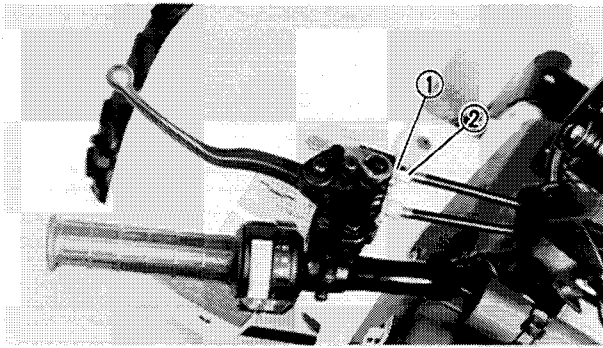


9. Loosen the locknut ① (Parking brake) and turn the adjuster ② clockwise to release the tension in the brake cable.

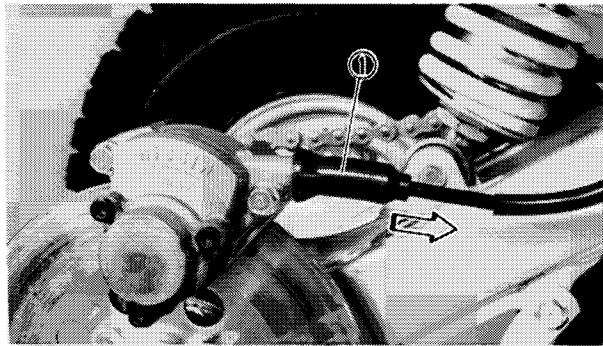


10. Pull back the cable adjuster cover ① from the rear brake caliper.

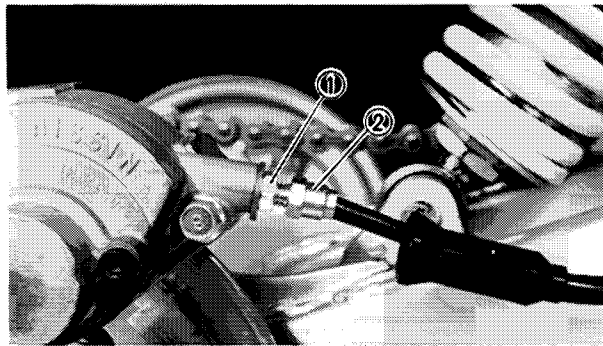

11. Loosen:
 - Locknut ① (until it stop)
12. Turn the adjuster ② clockwise until it stop.

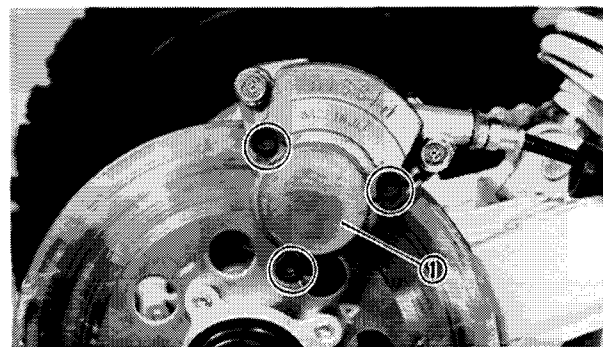

13. Remove:
 - Cover ① (Caliper)
 - Gasket

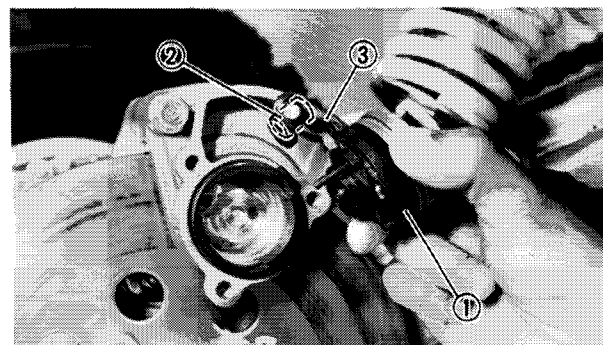

14. Take the adjuster unit ① out of the caliper body, and then detouch the pin ② from the adjuster arm ③.